

Date..../.....

Version 1.0




# Mechanical Installation Manual for

Ford Ranger 2022






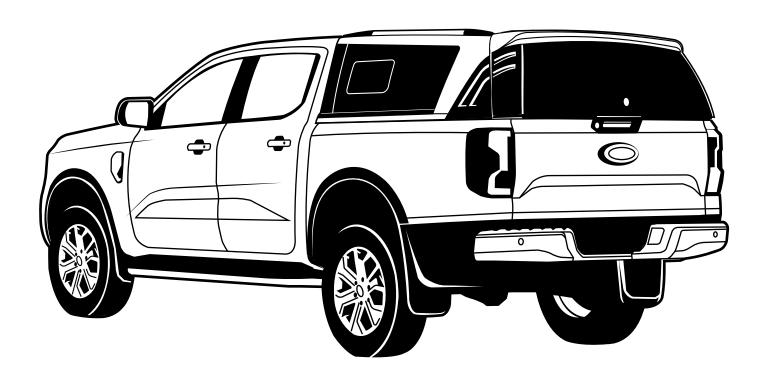



# ■ Steel Canopy S-Plus V2 \_\_\_\_\_

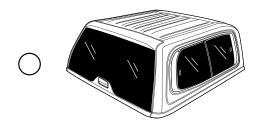

Glass Slide Window



Solid Window



Solid Birdwing Window (Handle Lock)




Glass Birdwing Window (Handle Lock)



Glass Birdwing Window (Electric Lock)

# Steel Canopy SUV-Plus V4 \_\_\_\_\_

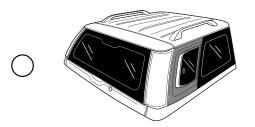

Glass Slide Window



Glass Fix Window




Glass Birdwing Window (Electric Lock)



Glass Birdwing Window (Handle Lock)

# ■ Steel Canopy TL-1 \_\_\_\_\_

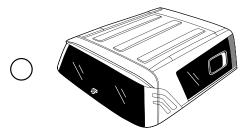

Glass Slide Window




Glass Birdwing Window (Handle Lock)




Glass Birdwing Window (Electric Lock)



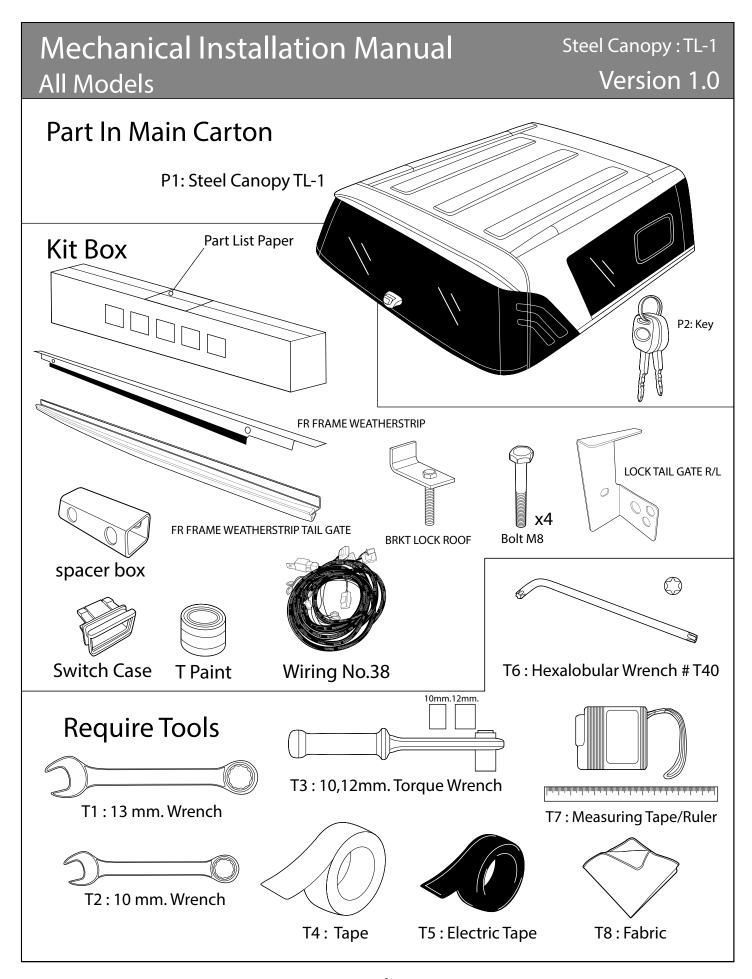




# The Procedure of checking the Sammitr canopy box before installation.

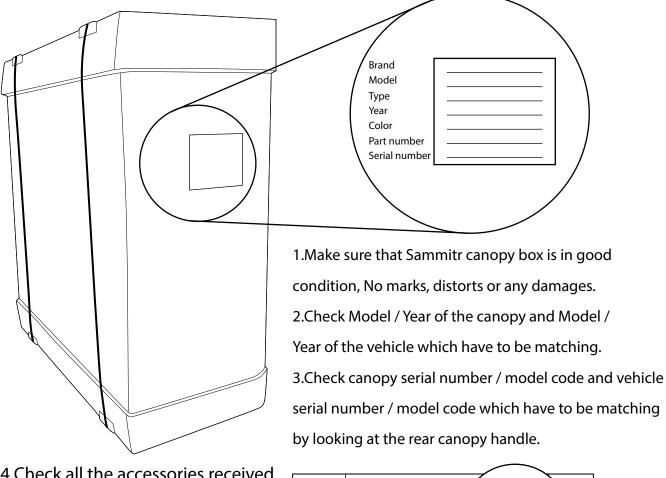


4.Check all the accessories received

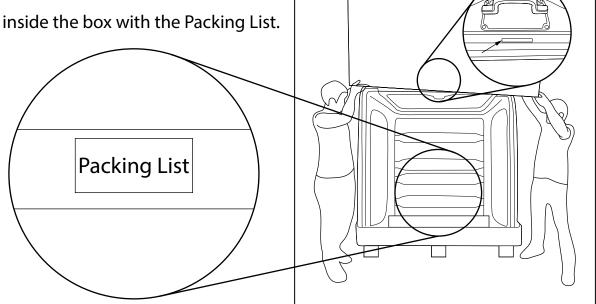






# 2 The preparation process of Sammitr Canopy TL-1 model before installation with the vehicle.

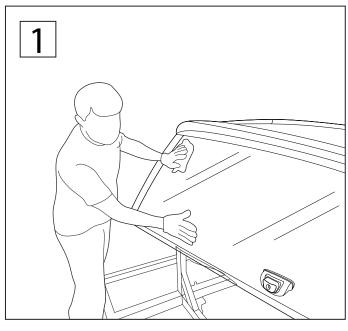


- 1. Canopy have to be in good condition, no damage, dent, cracks, smooth surface including no window damages or cracks.
- 2. Locking system is working for both keys.
- 3. Canopy sides are not damage, dent or cracks.
- 4. Canopy front window panel is working (open/close), no cracks or damages occurrences.
- 5. Check the Rear Door by open and close.

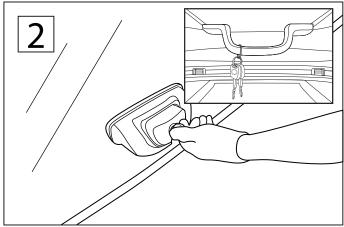


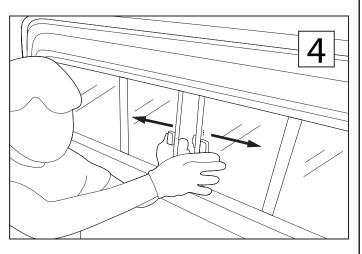

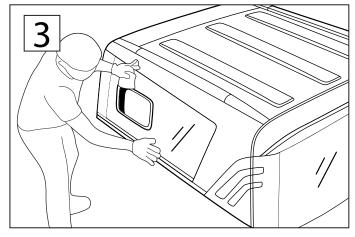


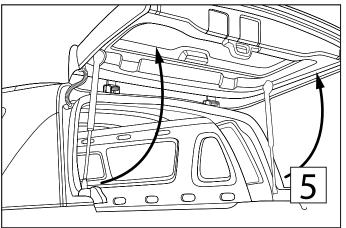



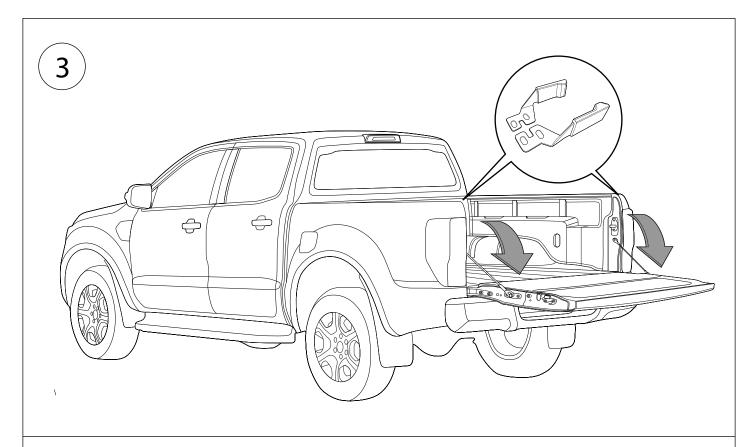


# Installation complete.

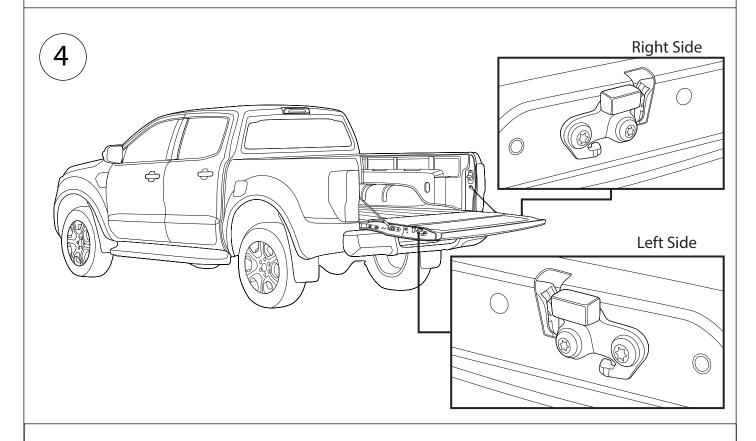


The Position install of lock Side




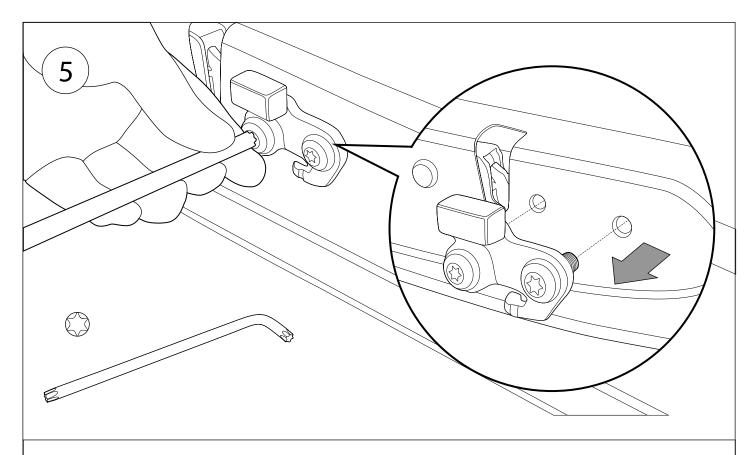


# Remove The Lock Side of tailgate. ( Left / Right Side )

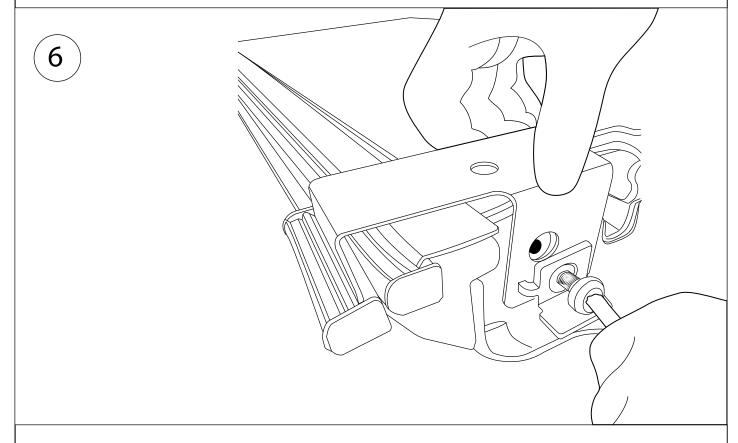




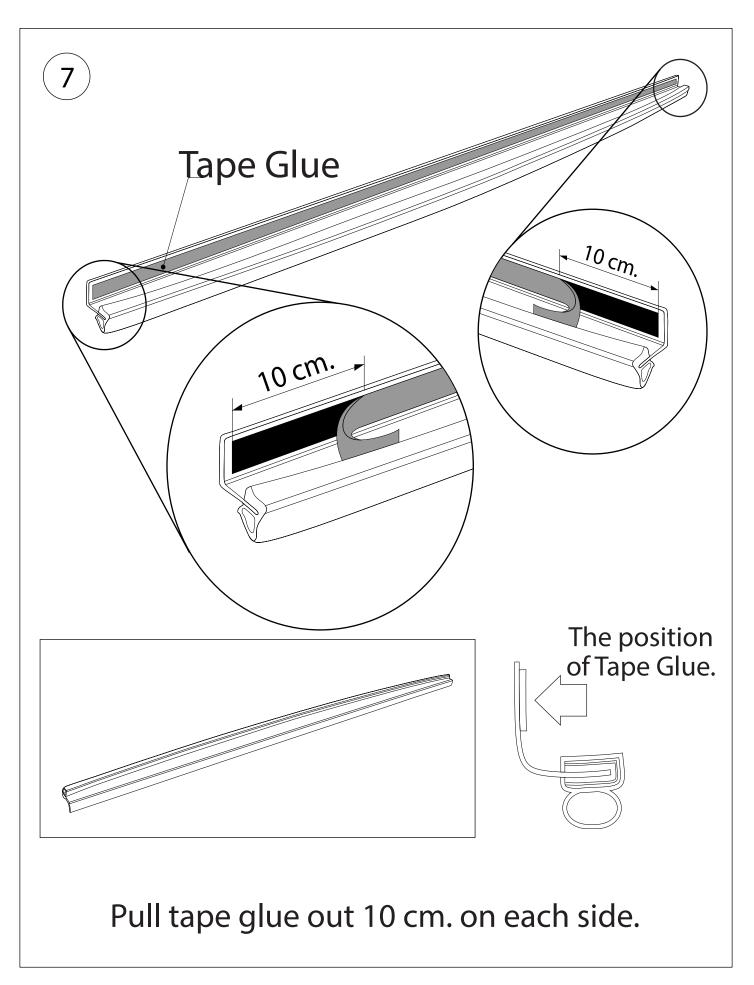



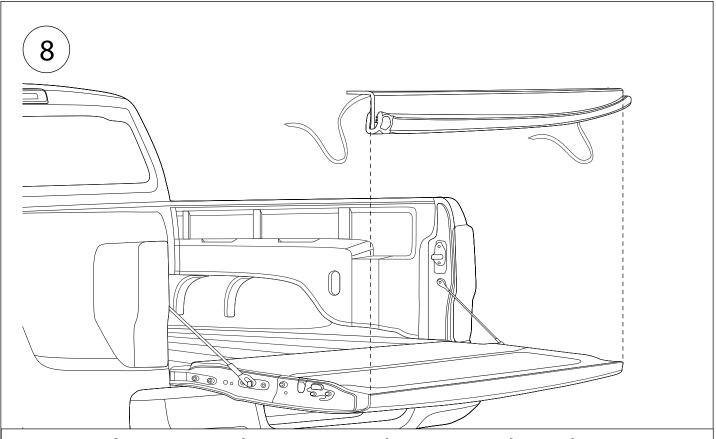


Alignment the position between the edge of tailgate and Frame Weather Strip.

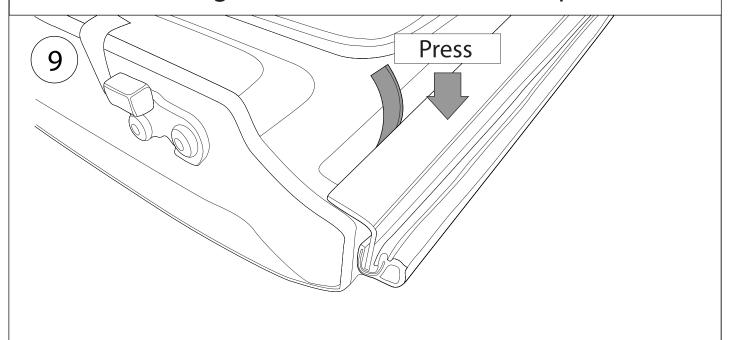


Pull the tape glue.




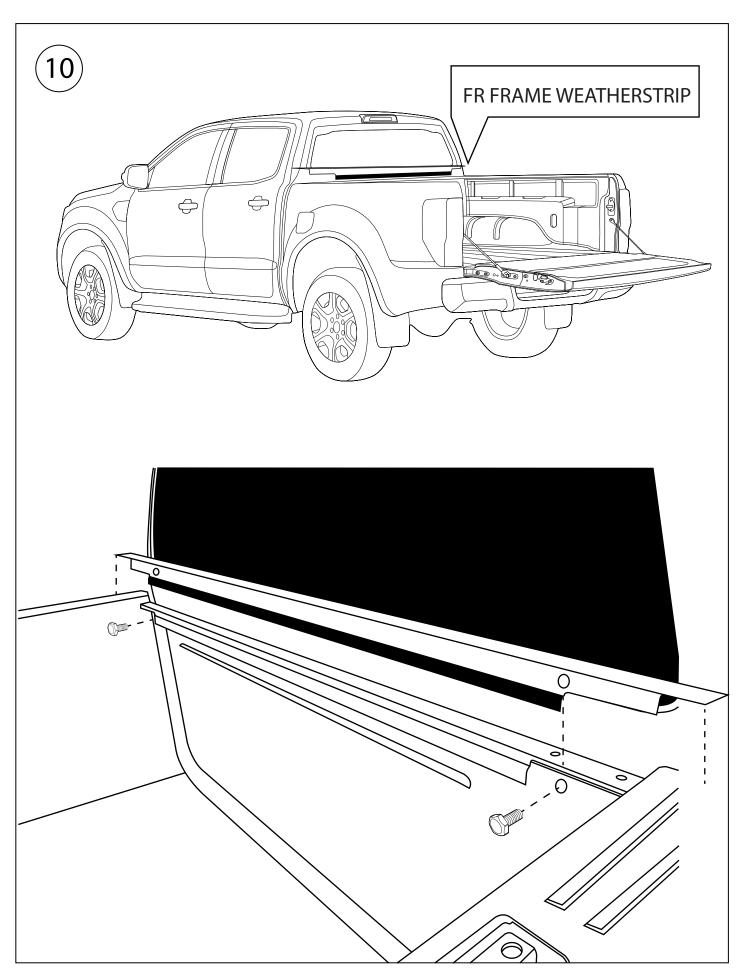




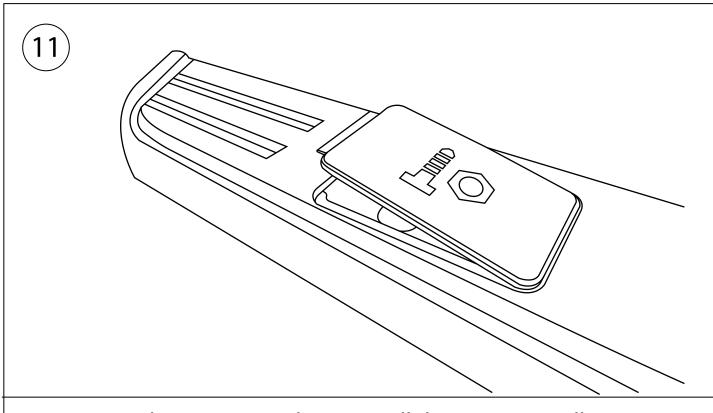


Remove the Cover in order to install the spacer Install canopy on the vehicle

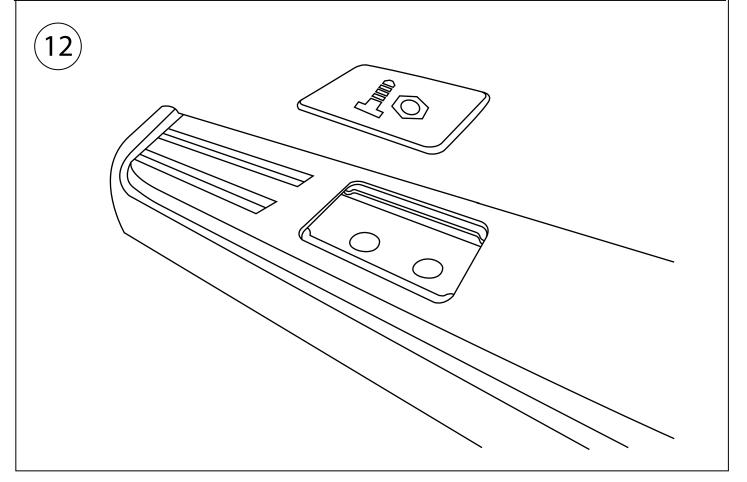



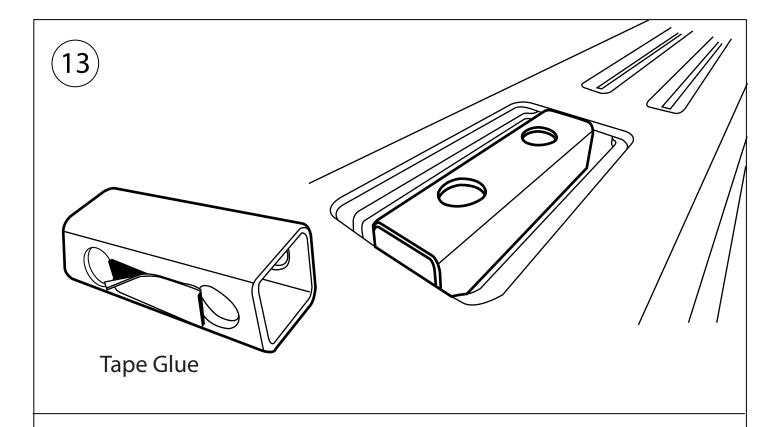


# Remove the glue tape and press in the gap

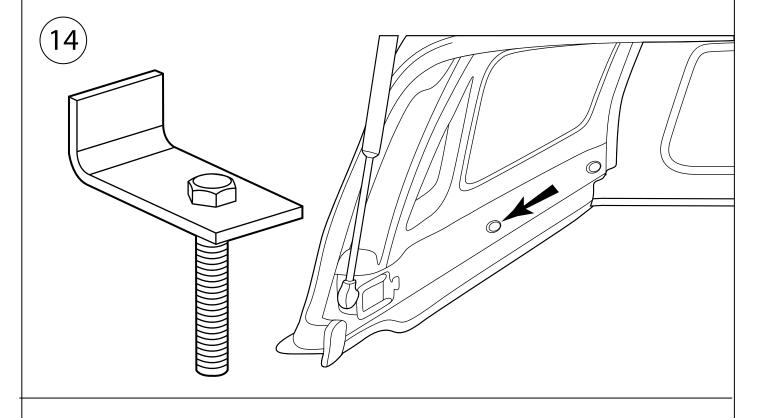


**BRKT LOCK ROOF** 



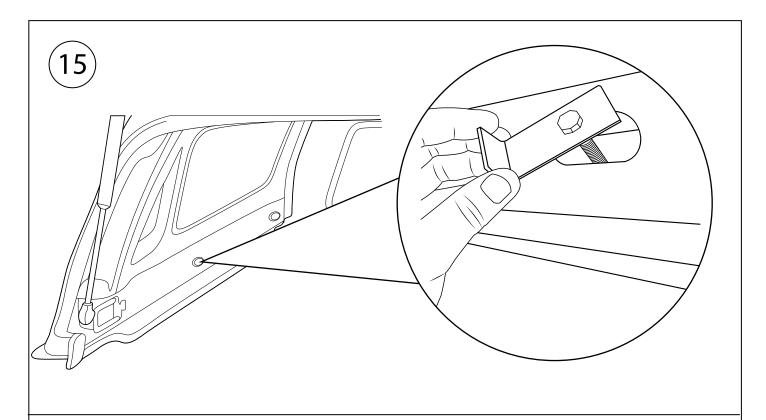



Bracket Lock Roof Bolt M8 mounting positions onto vehicle (left).

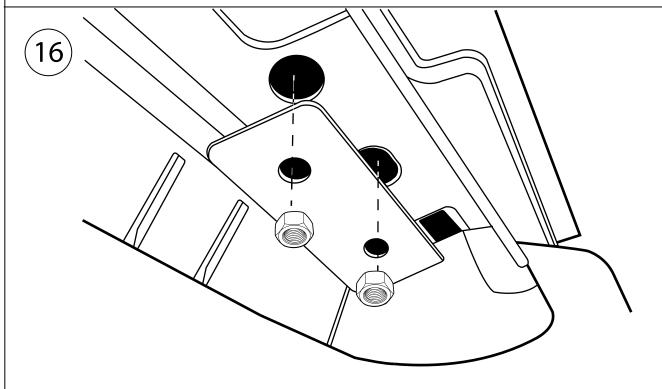


Install bracket to gether with M8 Nut along the spacer till canopy body spot.



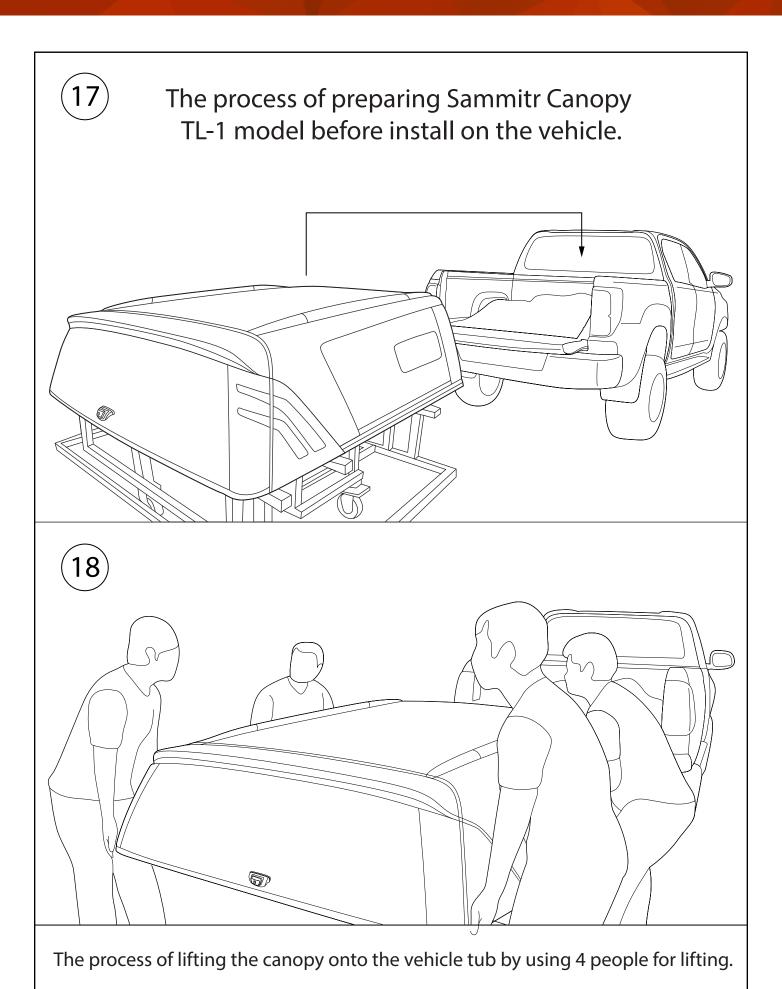

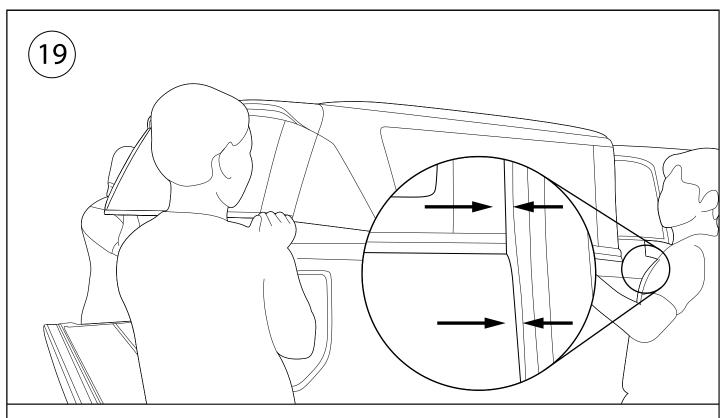


Lift canopy over the pick up truckby rising the rear part higher and the front part to be in the parallel with the edge of the vehicle tub.

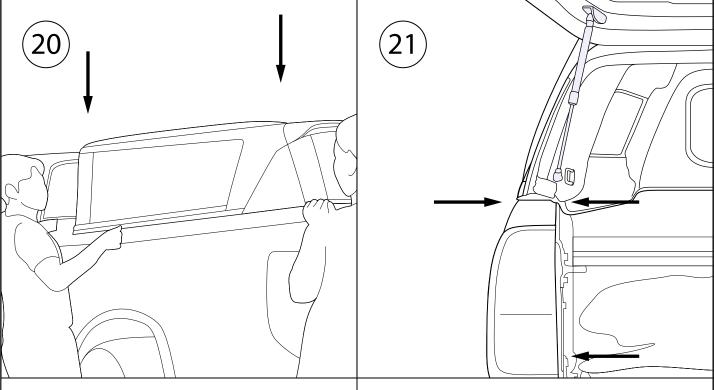


After get the distance in front part and then put the rear part to cover the vehicle tub

Make sure the distance between canopy edge and vehicle rear tub are equivalent both left and right sides.



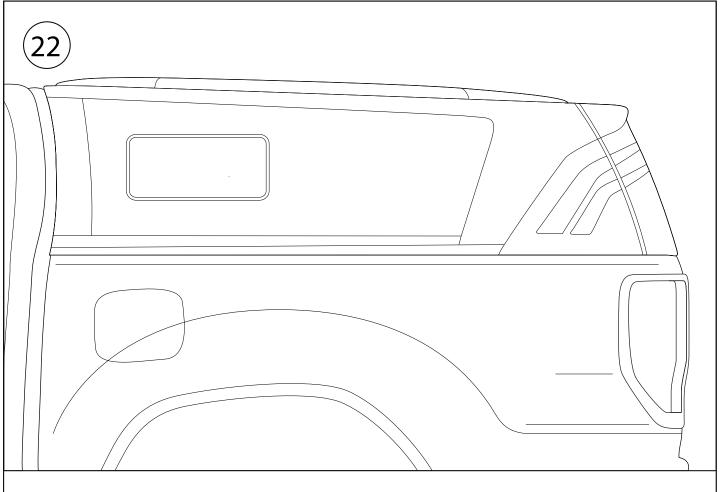


Side edge of canopy to be in the parallel with the Side edge of the vehicle tub.

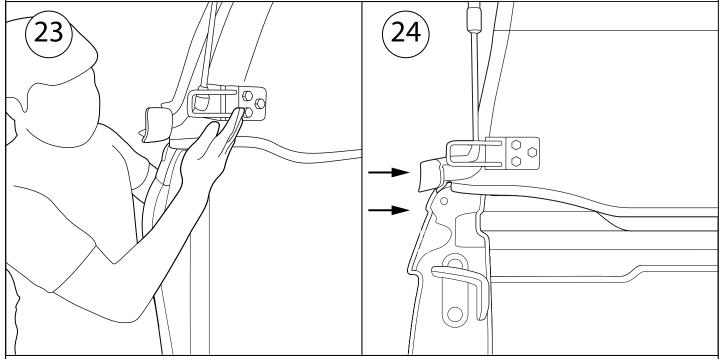


After finished measure the side part, check the distance at rear part of canopy which must have to be in the parallel with the Rear edge of the vehicle tub.




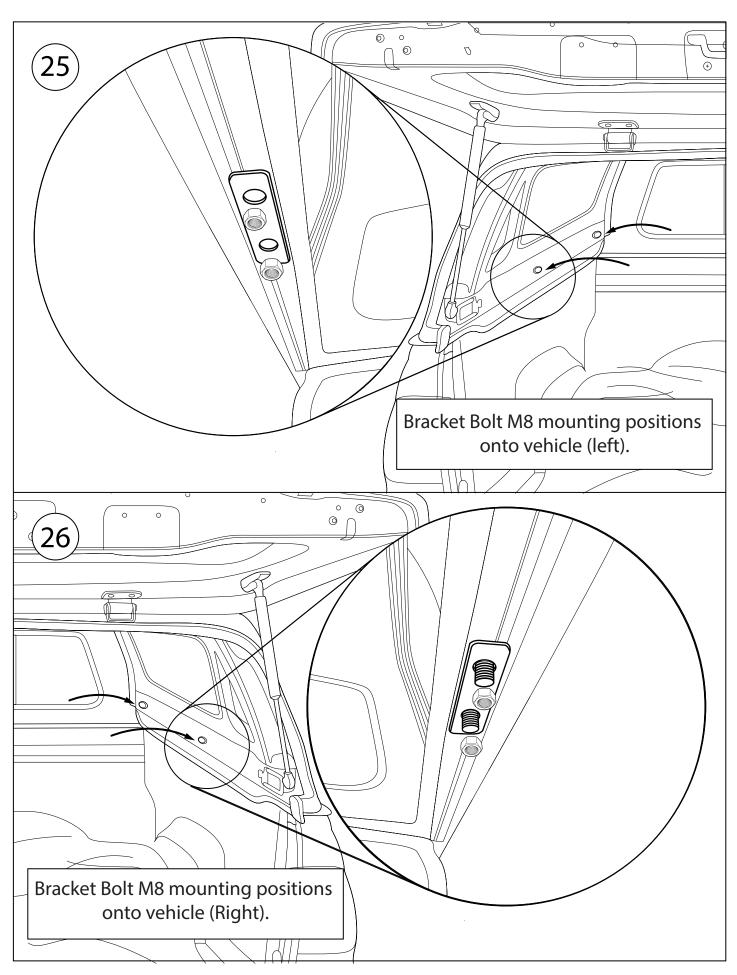



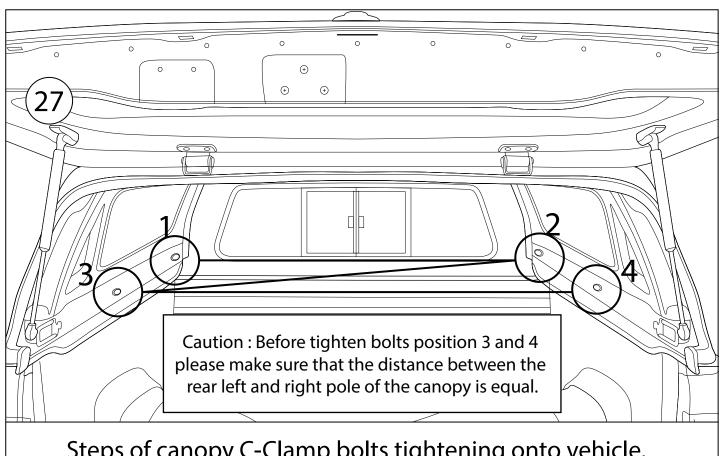


# Steps of canopy C-Clamp bolts tightening onto vehicle.

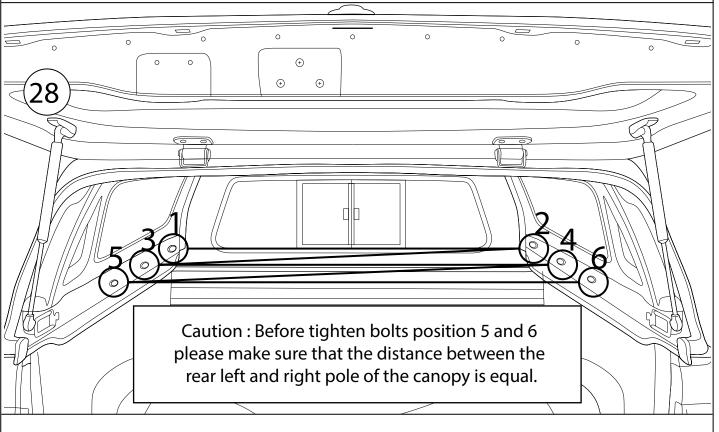

Steps of canopy C-Clamp bolts tightening onto vehicle.




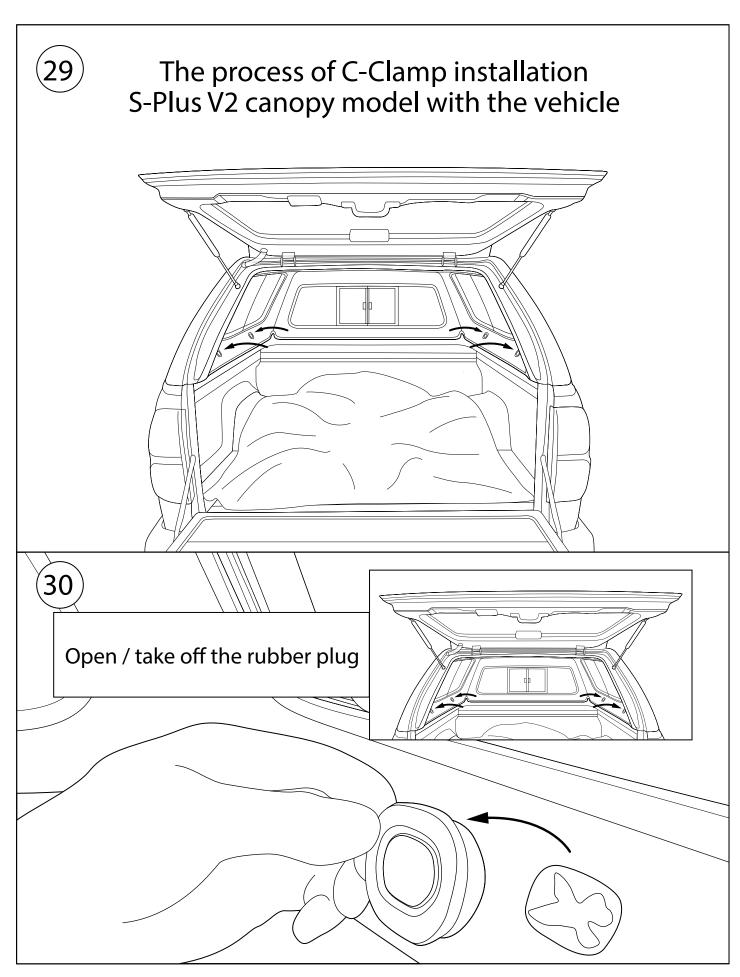




# Electrical Installation



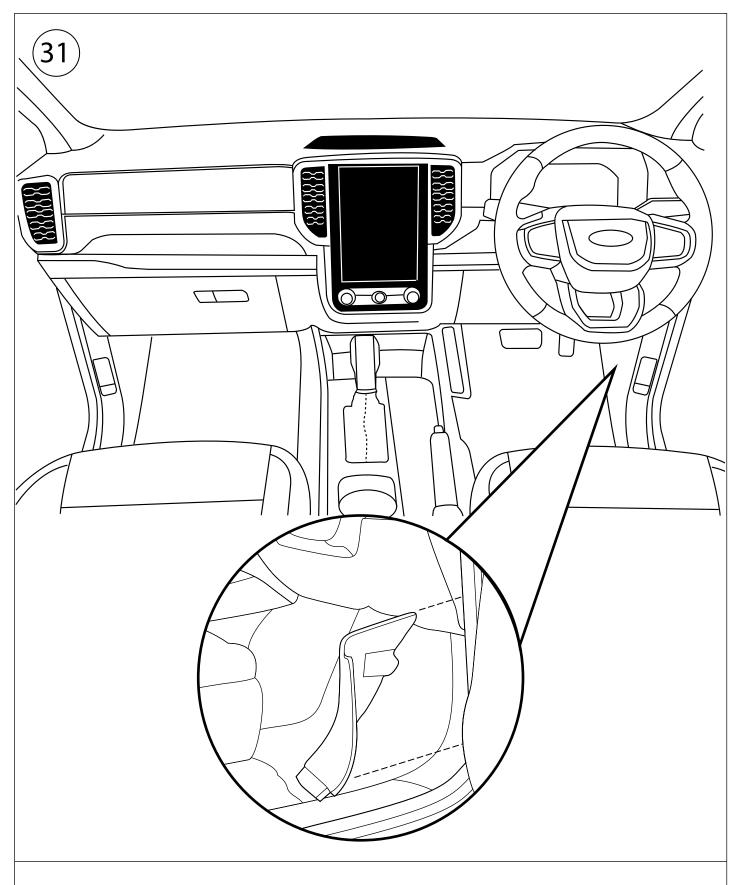


Take off the Wiring Cover at the driver side in order to check the wiring position.




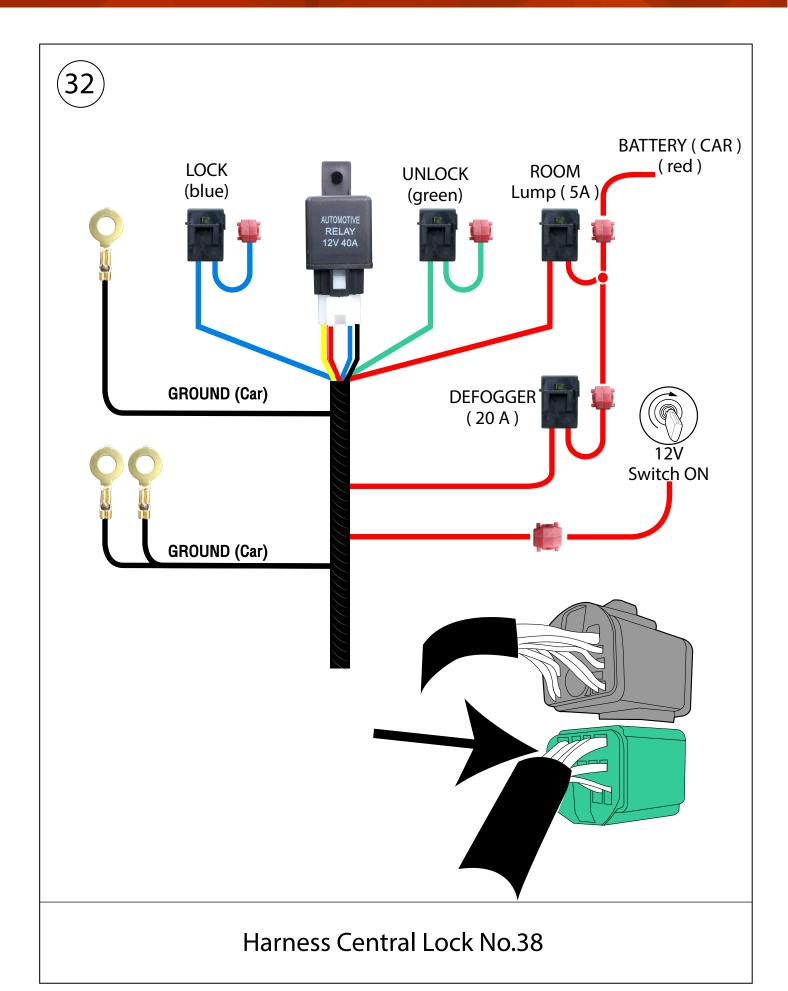



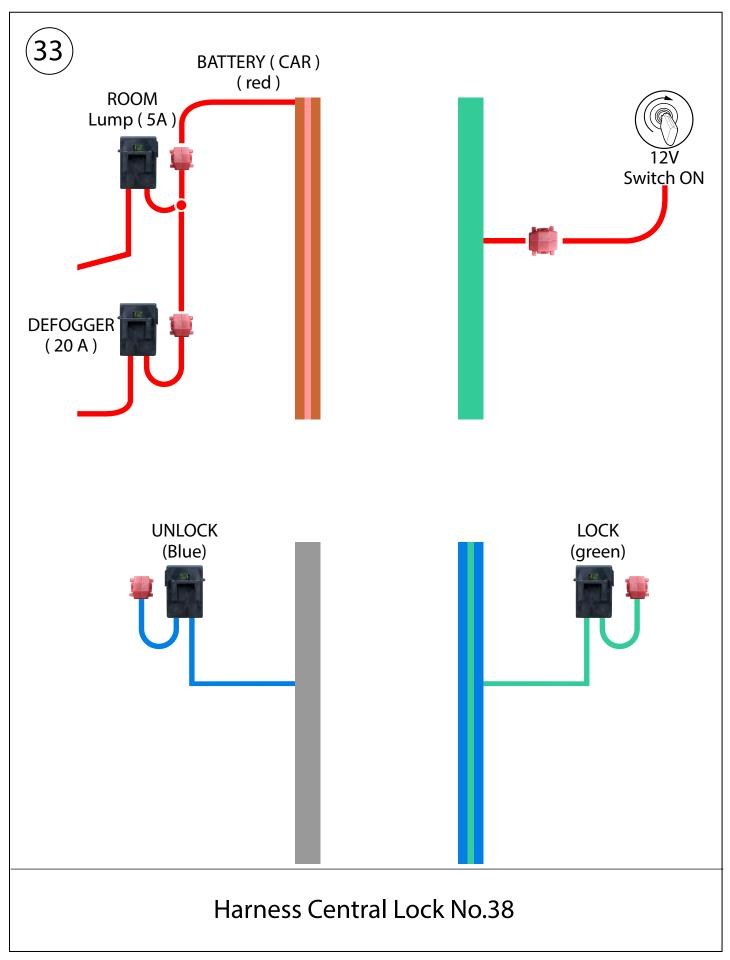




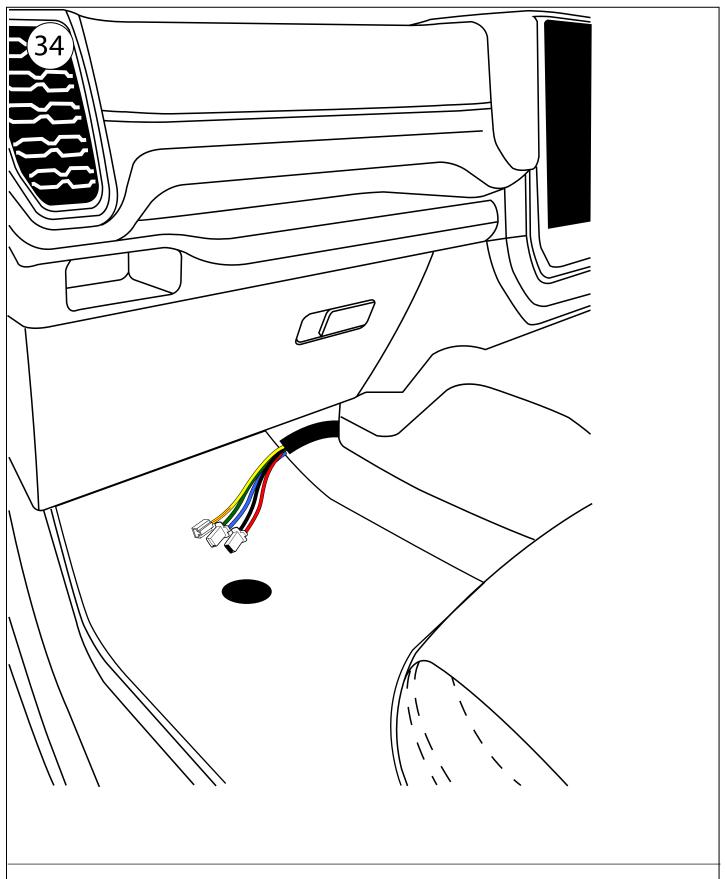


Running canopy wiring via vehicle wiring hole/pipe along under the chassis.




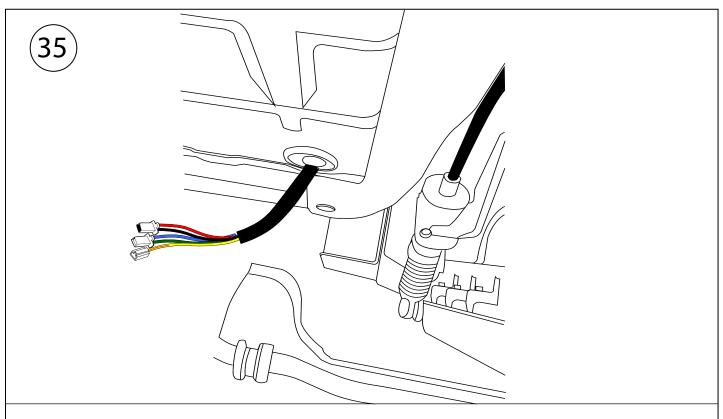


Run the wiring througth the hole of the vehicle floor and seal to protect water leaking problem.

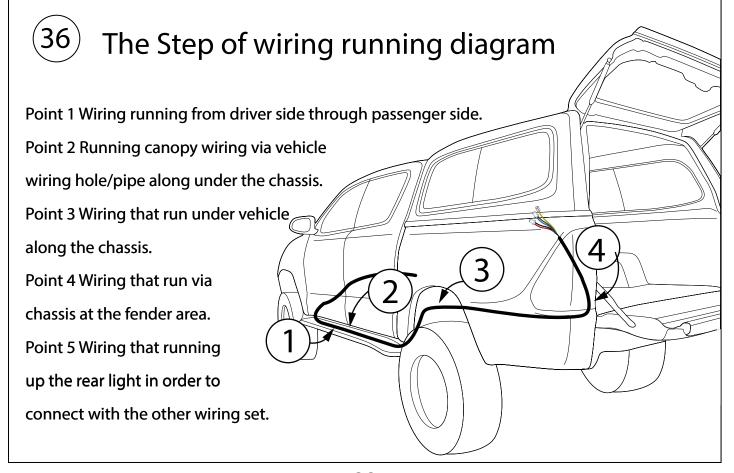




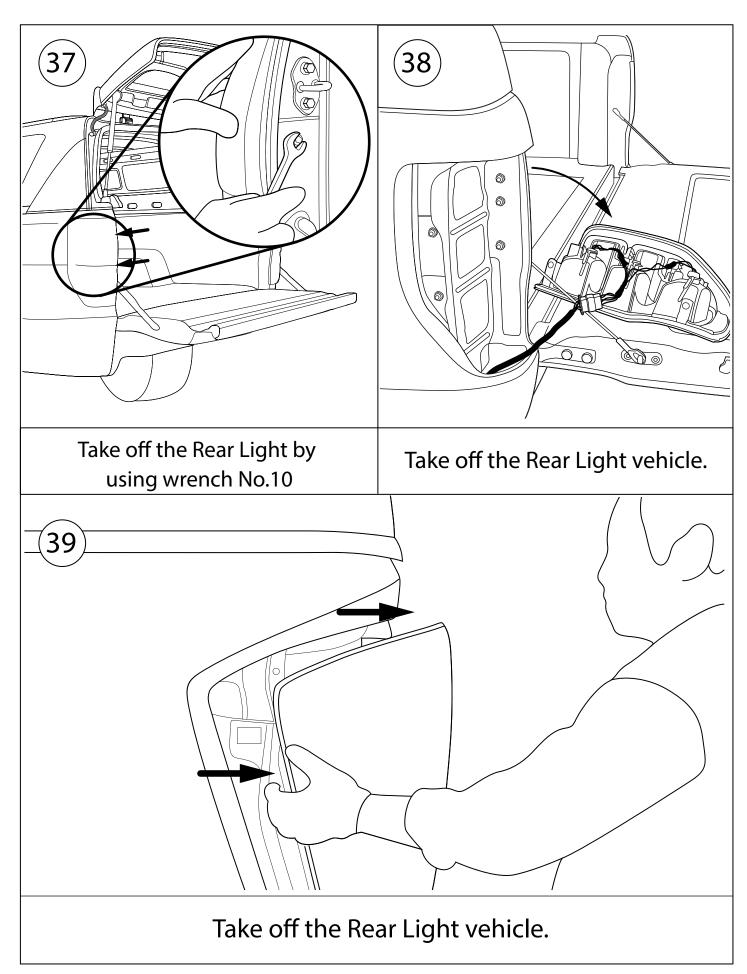


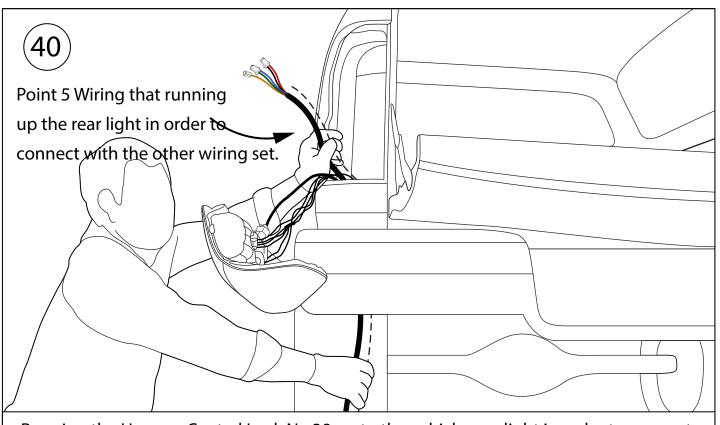

Running the Harness Central Lock No.38 up to the vehicle rear light in order to connects with the Harness Central Lock No.40.

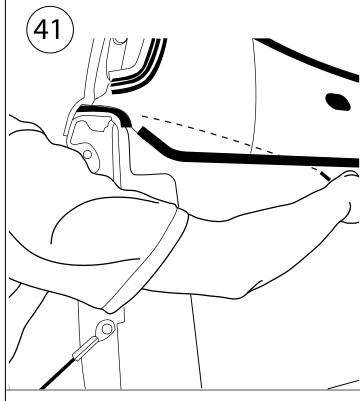


Run the rod along the vehicle edge till the Rear vehicle light.

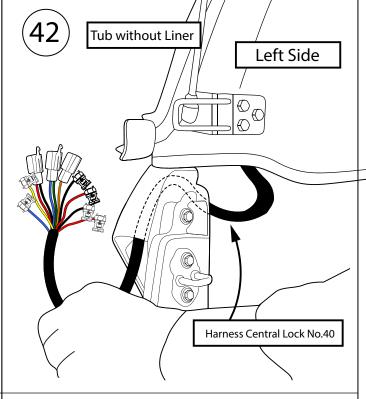


Run the Harness Central Lock No.40 along the vehicle tub channel out of the Rear Light Socket.




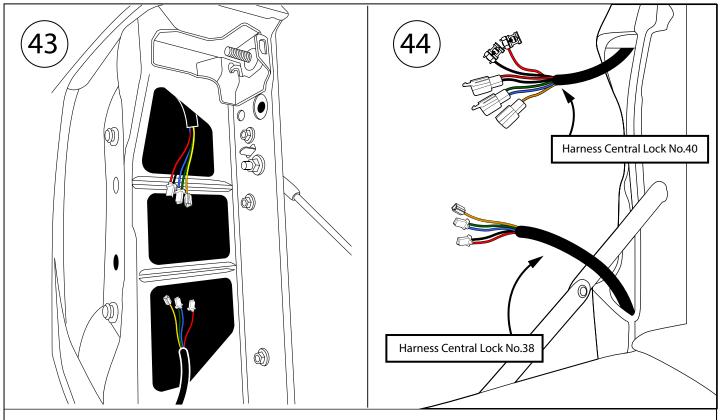


The Harness Central Lock No.40 wiring vehicle position and the Harness Central Lock No.38 wiring set.

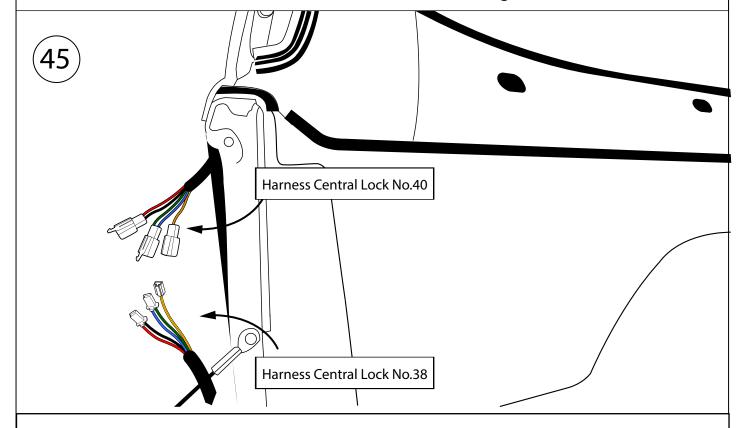


Re-assembly Harness Central Lock No.38 of all positions back to the spots.

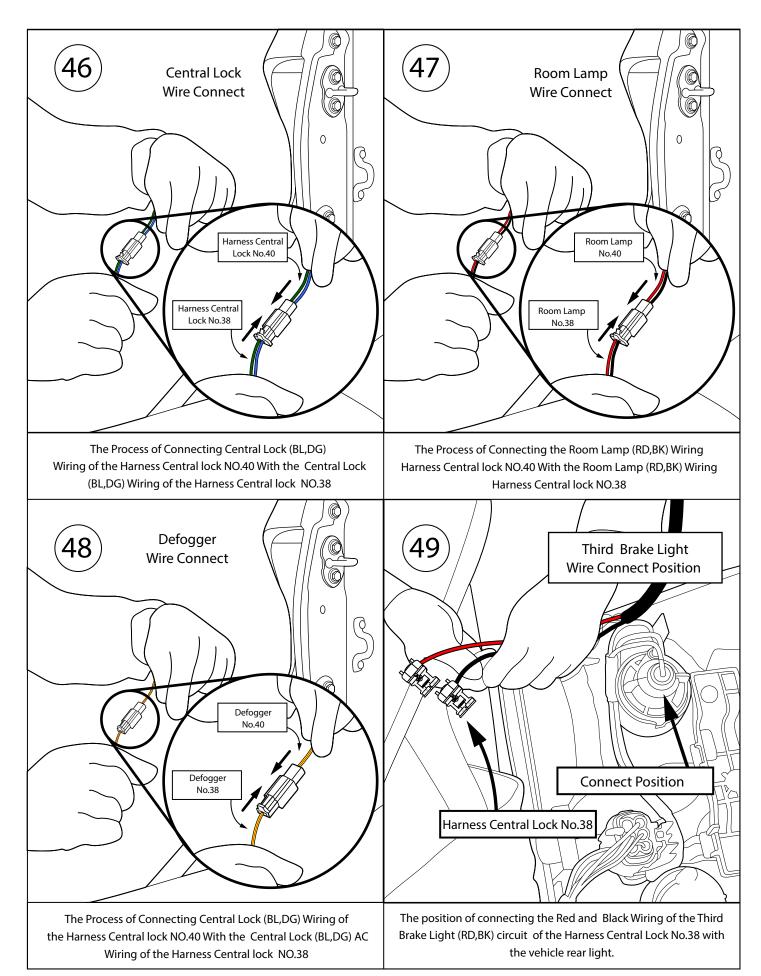



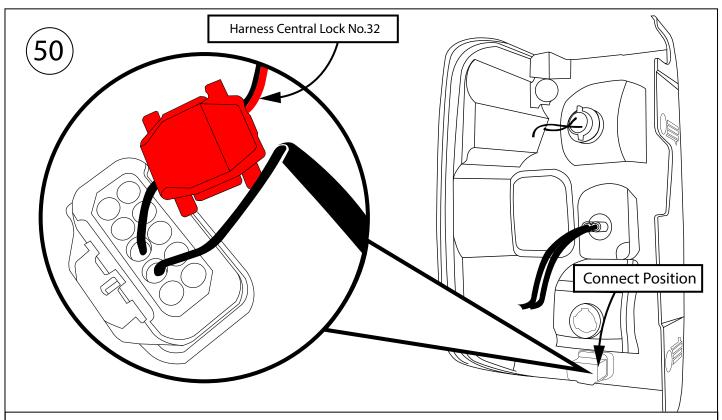


Connect the Red wiring, third Brake Light (RD) of the Harness Central Lock No.38 with the Black Brake Light Wiring on the Left Side of the Rear vehicle light.

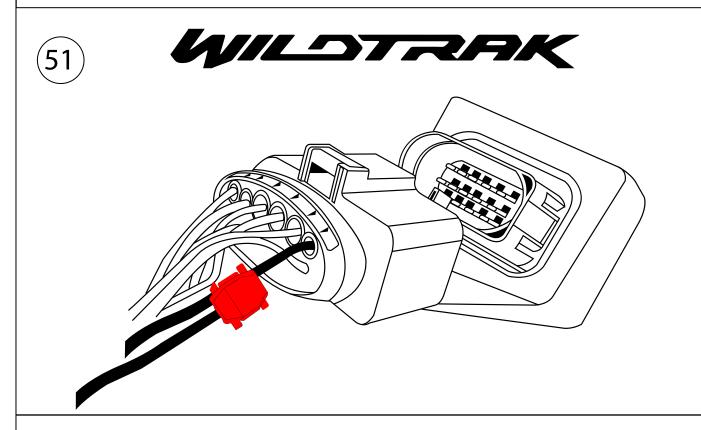


Connect Position Wiring Brake Light (Wildtrak)



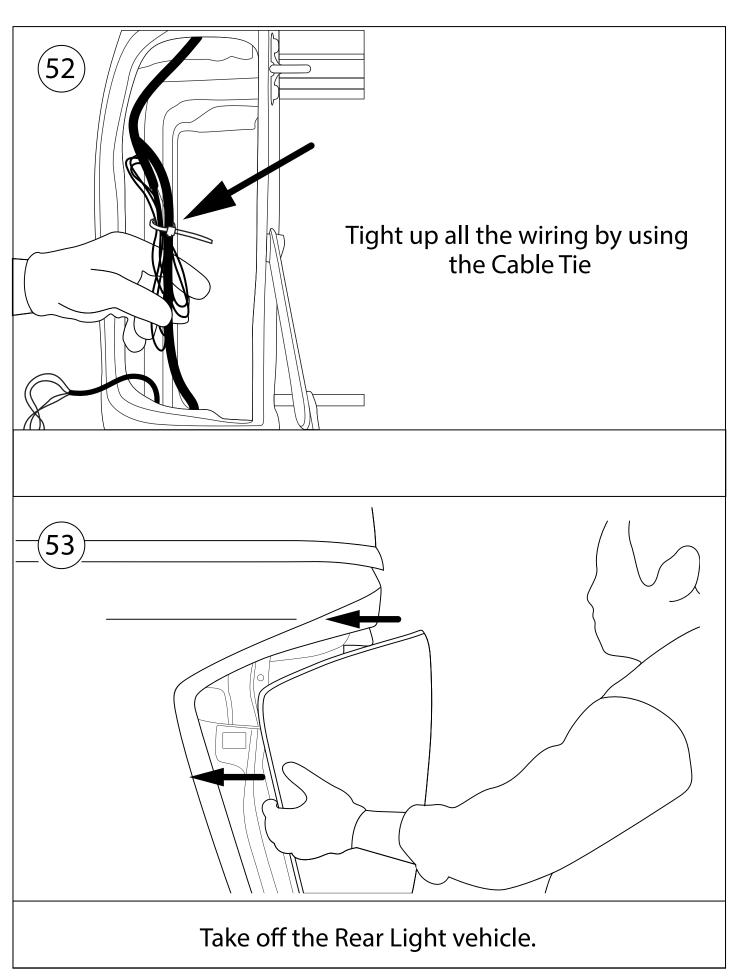




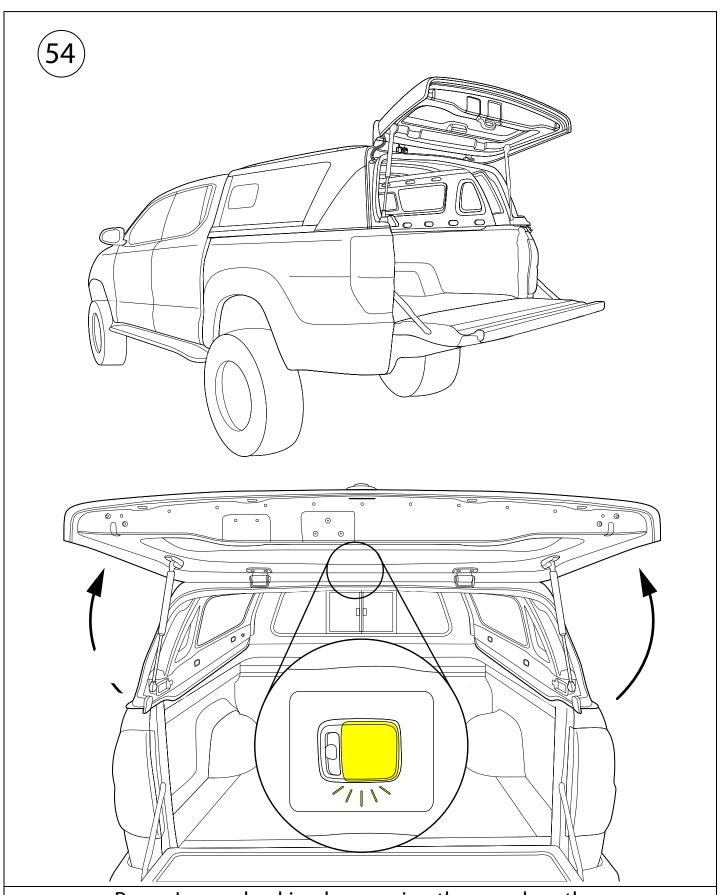


Room Lamp checking by opening the rear door then the Room Lamp will be on.



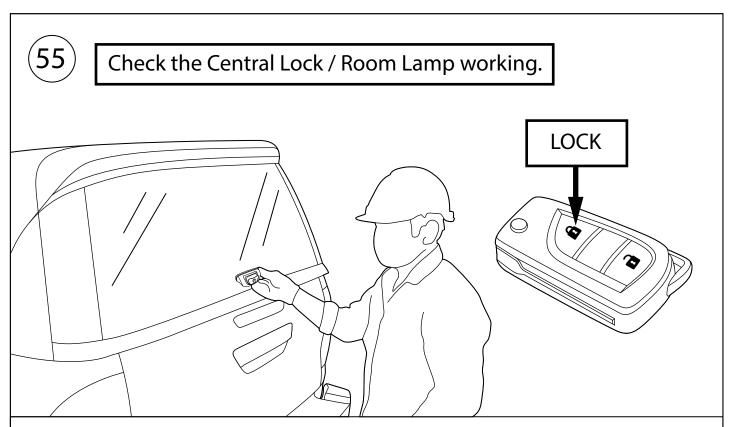

Central Lock checking by pressing the vehicle remote key at the Lock position, Canopy will be lock and cannot open.

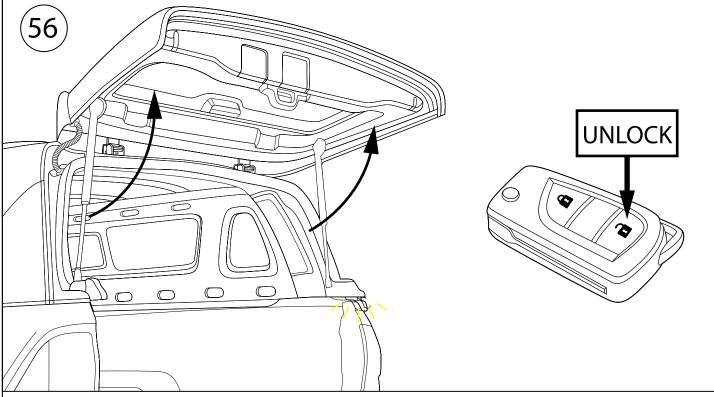


Central Lock checking by pressing the vehicle remote key at the Unlock position, Canopy will be open.



# Opening Function of all canopy model





Front Window function usages will be the same for all model, V2, V4 and TL1.

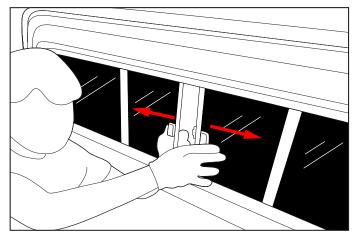


Use the key is unlock function will be the same for all model, V2, V4 and TL1.

Open the backdoor function are different.

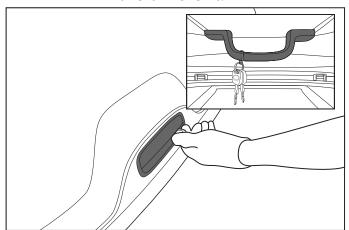


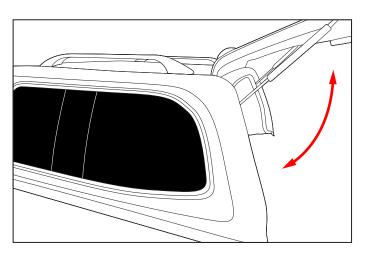


User manual

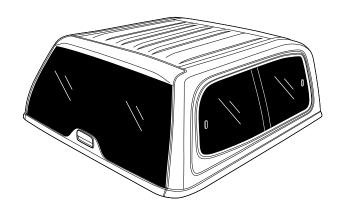

Slide Window (Left-Right)

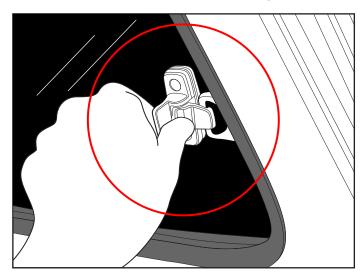


Squeeze the lock side to open.

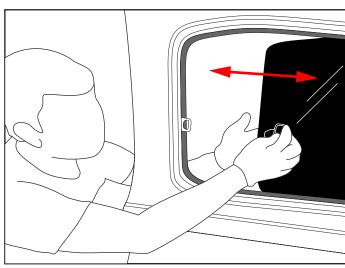


The Picture shows how to open the side window.




User manual

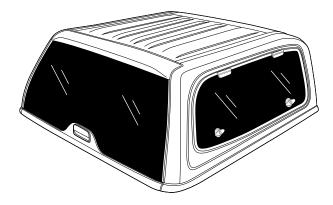

Glass Birdwing Window Left-Right (Handle Lock)

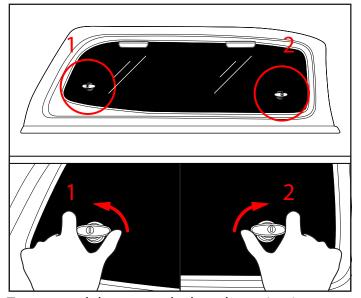


Turn around the canopy lock as shown in picture to open the side window.

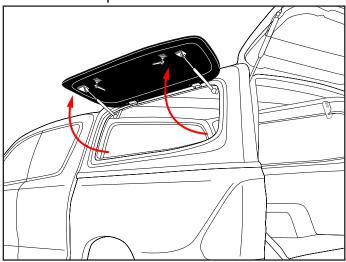


Picture shows how to open the side window.


User manual

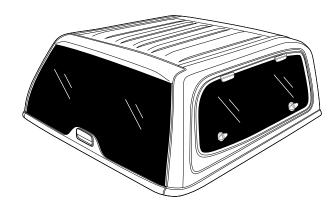

Glass Birdwing Window Left-Right (Handle Lock)

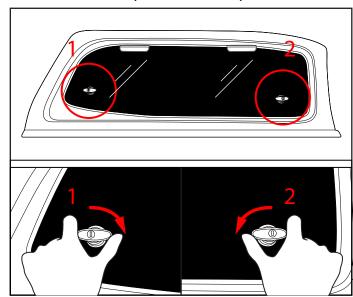


Turn around the canopy lock as shown in picture to close the side window.

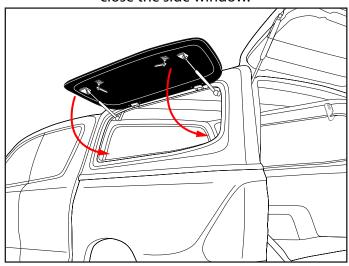


Picture shows how to close the side window.




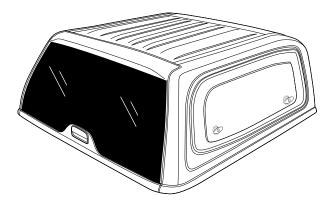


Solid Birdwing Window Left-Right (Handle Lock)

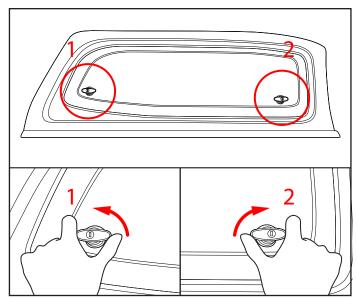


Turn around the canopy lock as shown in picture to open the side window.

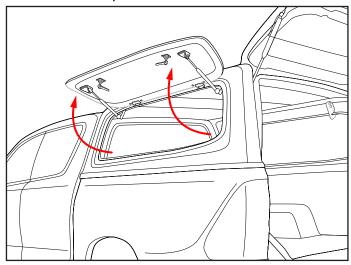


Picture shows how to open the side window.

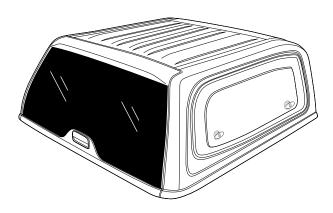

Solid Birdwing Window Left-Right (Handle Lock)

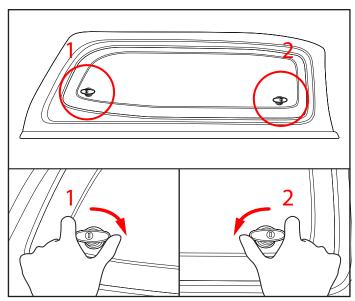


Turn around the canopy lock as shown in picture to close the side window.

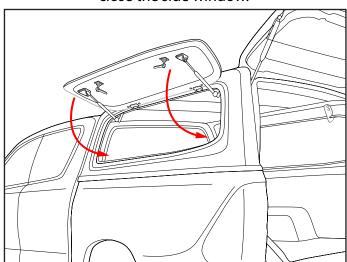


Picture shows how to close the side window.




User manual

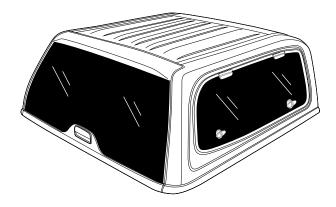

Backdoor

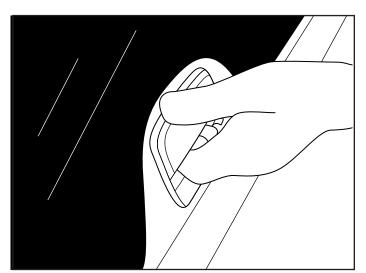


Use the handle as shown in picture to open the backdoor.

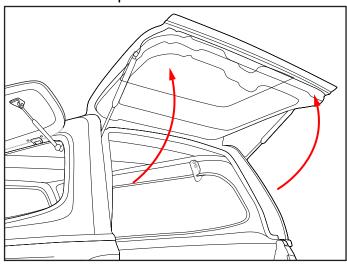


The Picture shows how to open the backdoor.


User manual

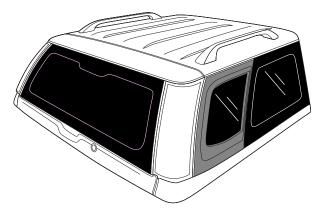

Slide Window (Left-Right)

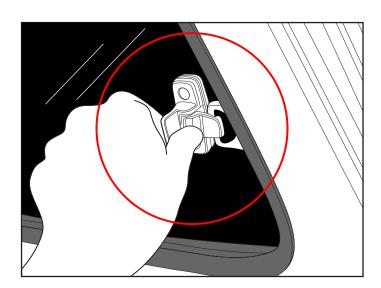


Squeeze the lock side to open.

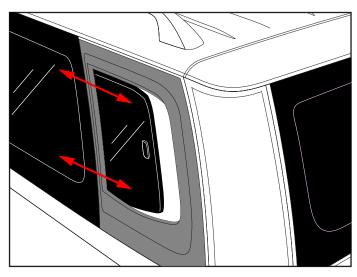


The Picture shows how to open the side window.




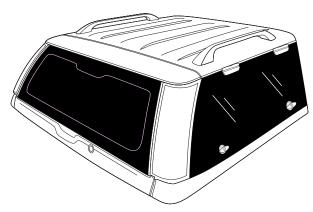


Glass Birdwing Window Left-Right (Handle Lock)

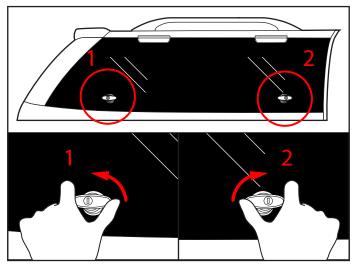


Turn around the canopy lock as shown in picture to open the side window.

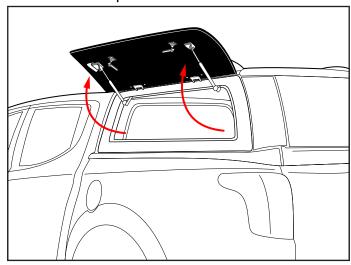


Picture shows how to open the side window.

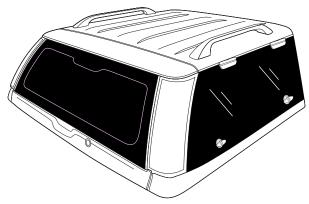

Glass Birdwing Window Left-Right (Handle Lock)

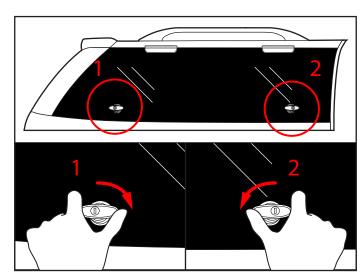


Turn around the canopy lock as shown in picture to close the side window.

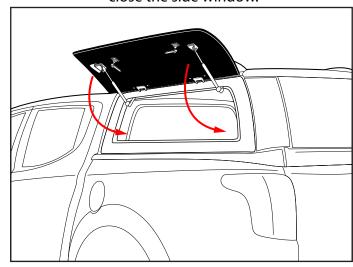


Picture shows how to close the side window.




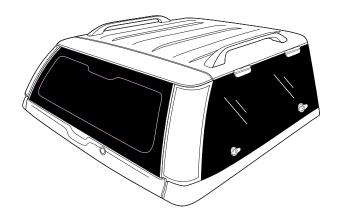


Backdoor

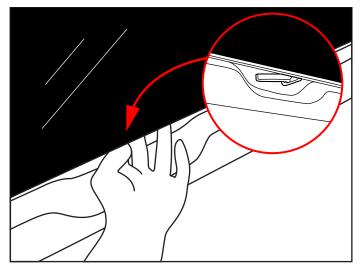


Pull the stick of handle to open the back door.

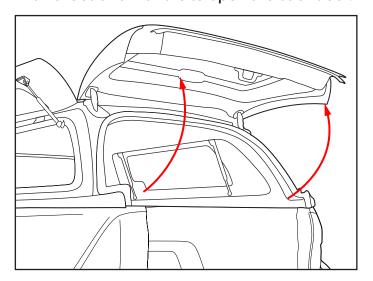


The Picture shows how to open the backdoor.

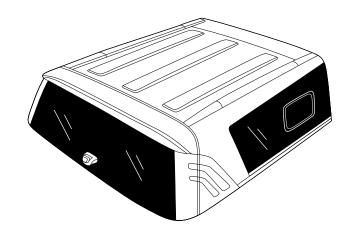

Slide Window (Left-Right)

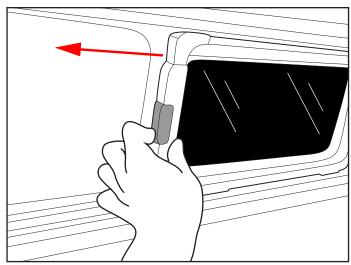


Push the button in side canopy and slide back to open.

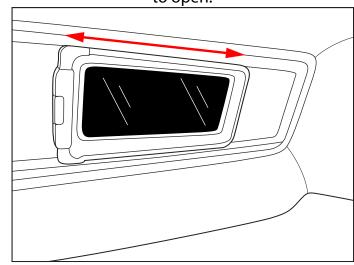


Picture shows how to open the side window from inside.




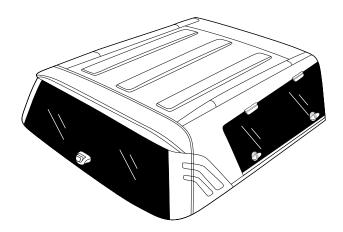

Glass Birdwing Window Left-Right (Handle Lock)

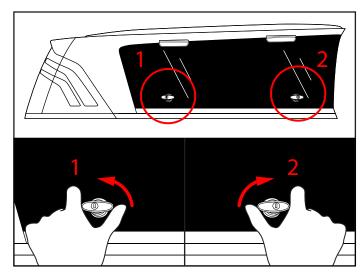


Turn around the canopy lock as shown in picture to open the side window.

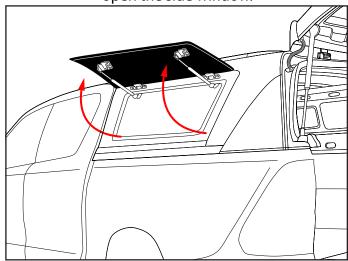


Picture shows how to open the side window.


User manual

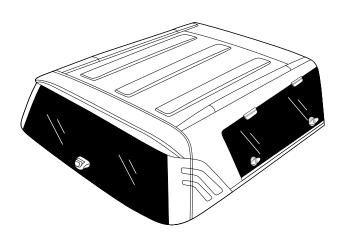

Glass Birdwing Window Left-Right (Handle Lock)

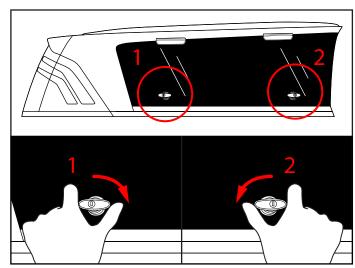


Turn around the canopy lock as shown in picture to close the side window.

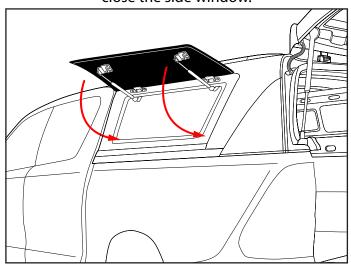


Picture shows how to close the side window.




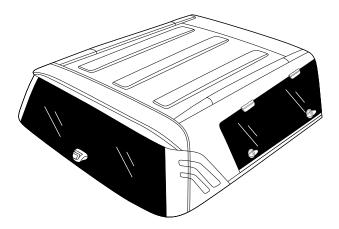

Backdoor

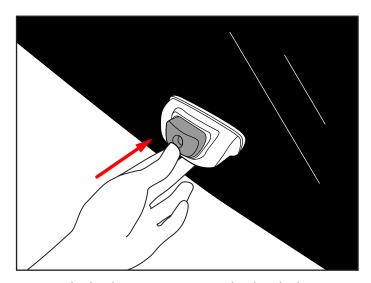

Push the button to open the back door.

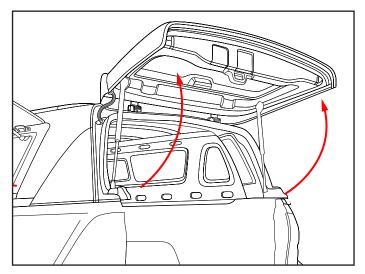

The Picture shows how to open the backdoor.