



Installation Manual


For Isuzu D-Max 2020

Steel Canopy : SUV-Plus V4


Version 1.0

Part In Main Carton


P1: Steel Canopy SUV-Plus V4

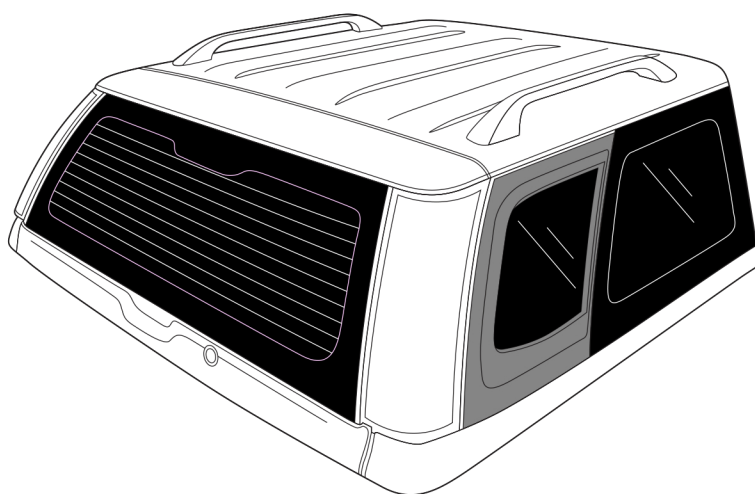

P2: Kit Box

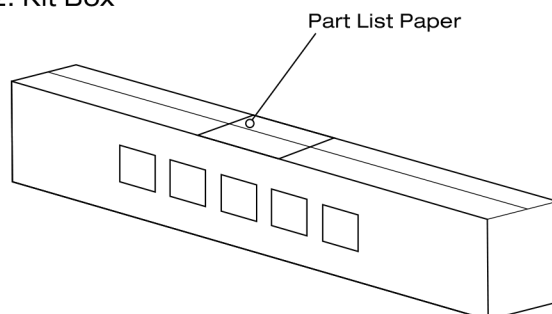


Part List Paper




P3: Key

Kit Box

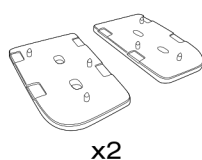

x2
K2 : Rubber R/L




K3 : Switch Case



x4

K5 : C-Clamp



x8

K7 : Bolt M6




x8

K9 : Washer M6




x8


K10 : Washer M8

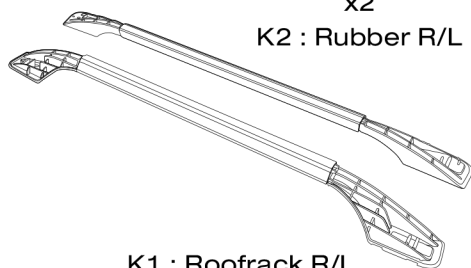

K1 : Roofrack R/L

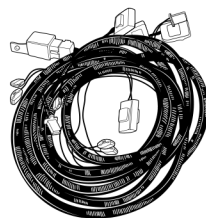

K4 : Wiring No.38

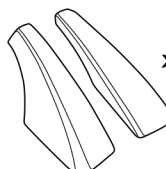

x2

K6 : Roofrack Cover



K8 : T Paint




x8

K11 : Spring Washer M6


Tools



T1 : 13 mm. Wrench

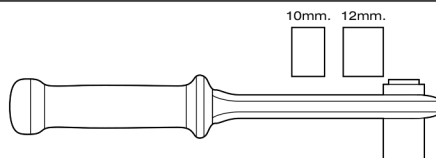


T3 : 10,12mm. Torque Wrench

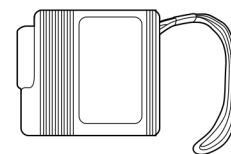

T4 : Measuring Tape/Ruler




T2 : 10 mm. Wrench

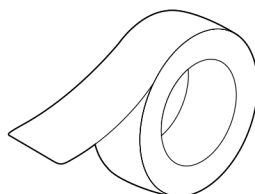

T5 : Tape



T6 : Electric Tape

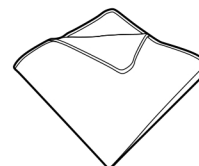


T7 : Fabric




1

The Procedure of checking the Sammitr canopy box before installation.

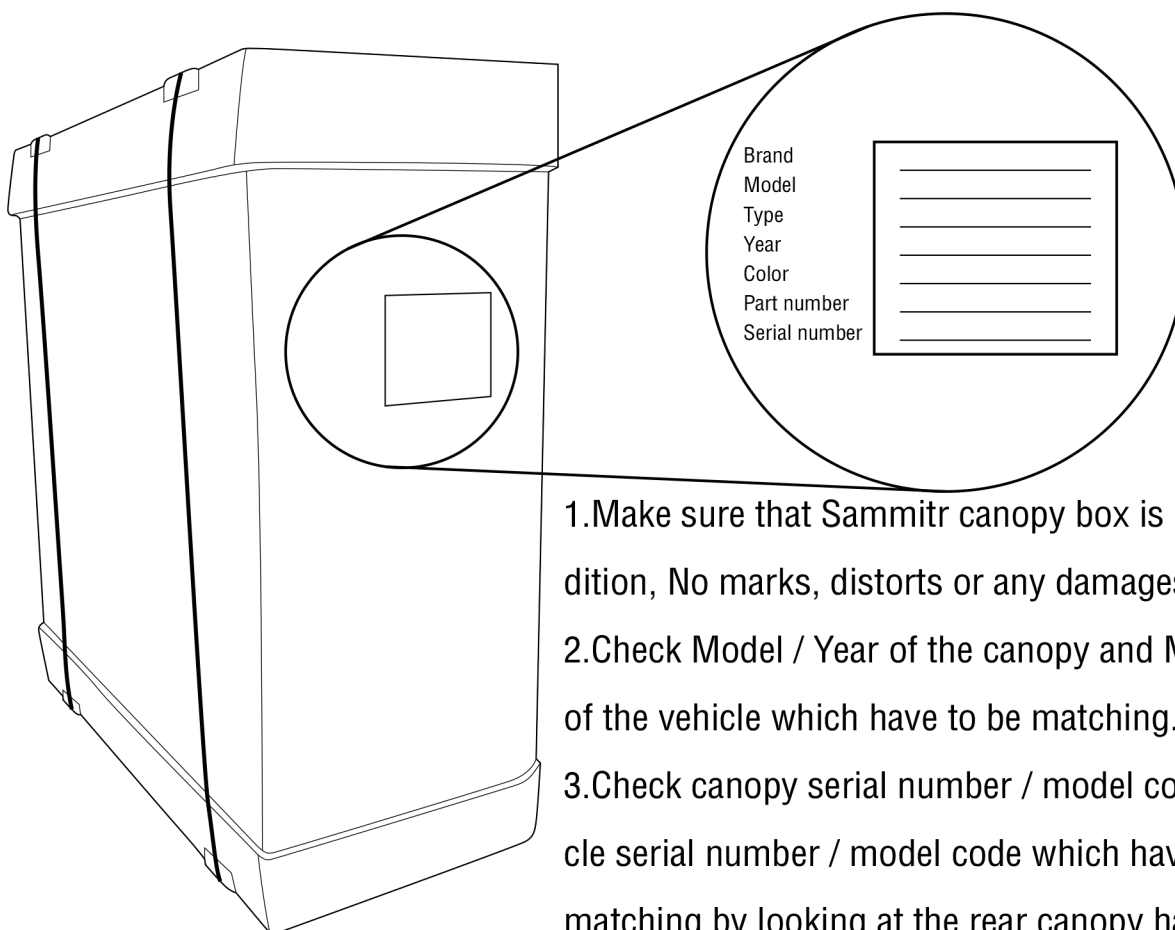

4. Check all the accessories received inside the box with the Packing List.

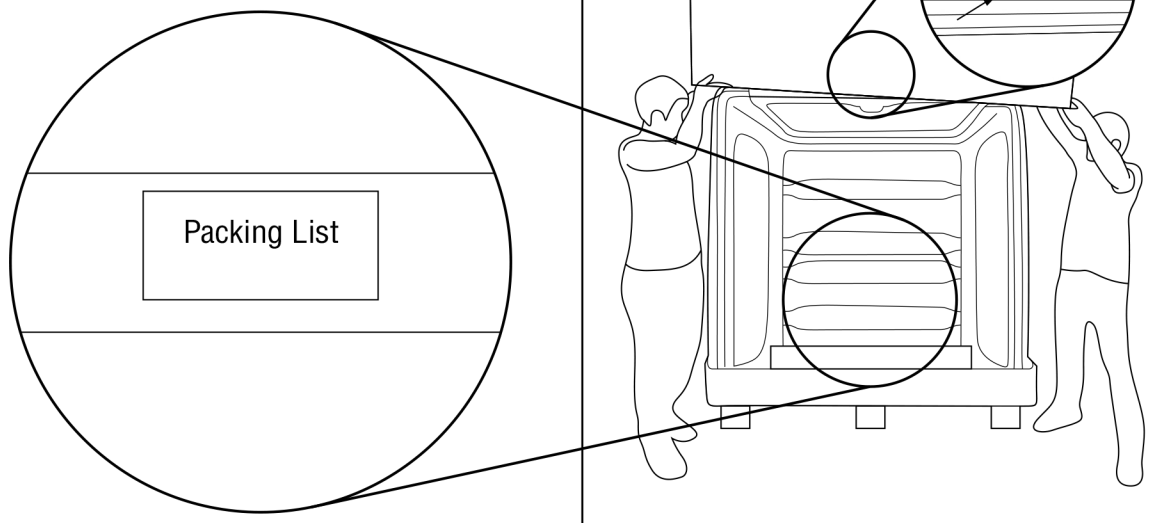




2


The preparation process of Sammitr Canopy SUV-Plus V4 model before installation with the vehicle.

1

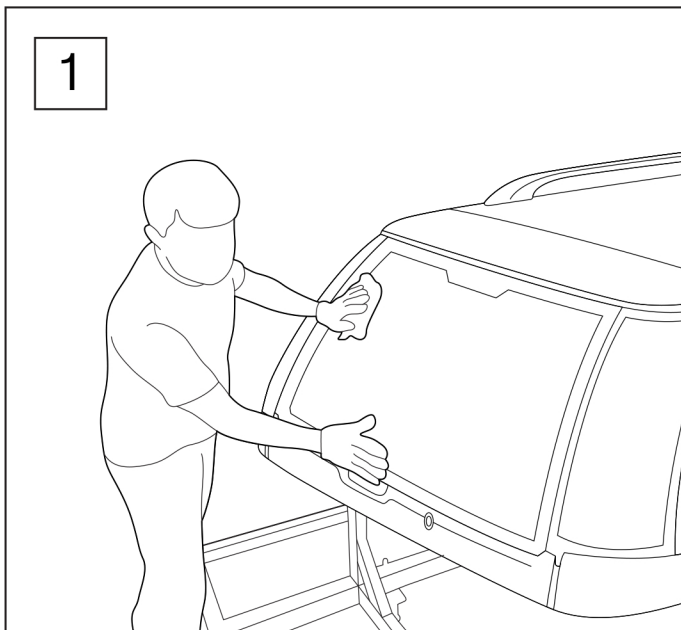


1. Canopy have to be in good condition, no damage, dent, cracks, smooth surface including no window damages or cracks.
2. Locking system is working for both keys.
3. Canopy sides are not damage, dent or cracks.
4. Canopy front window panel is working (open/close), no cracks or damages occurrences.
5. Check the Rear Door by open and close.


2

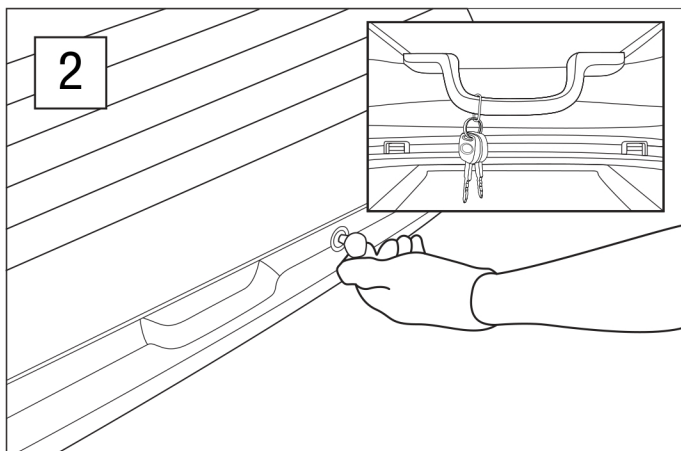


4

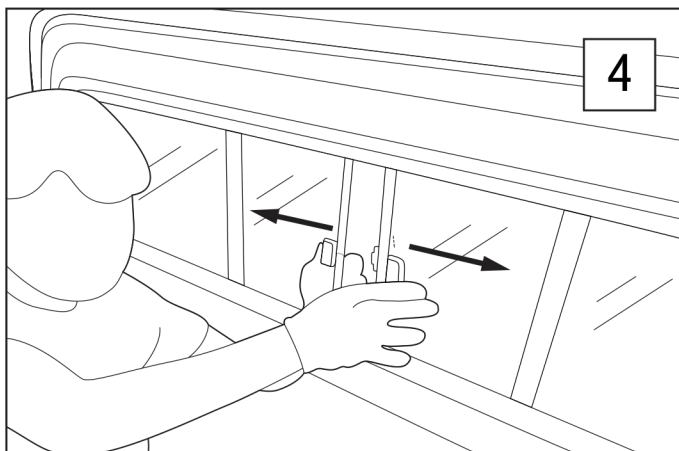

3

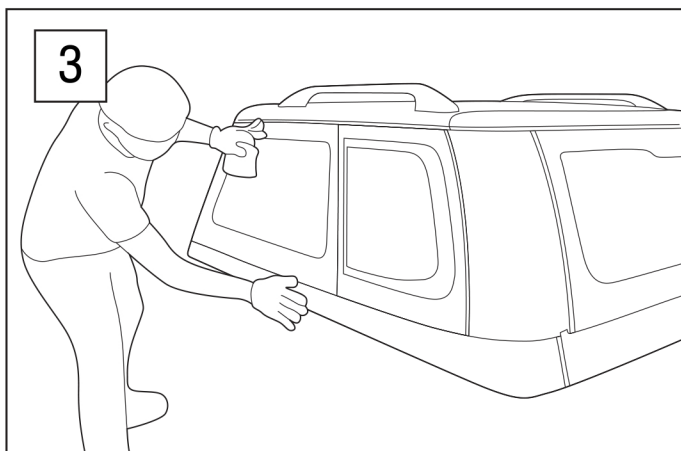



5

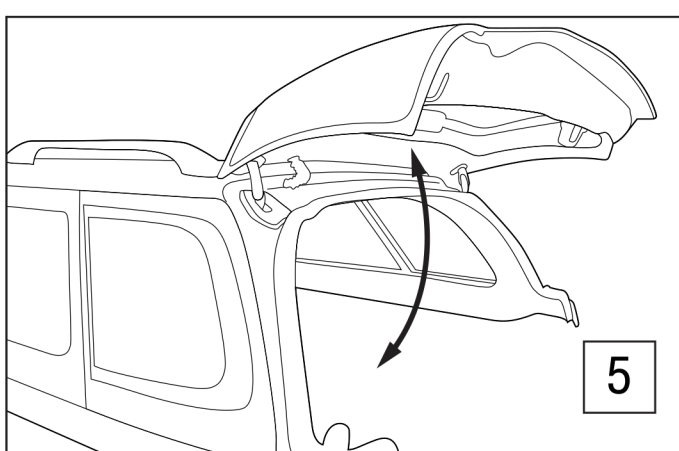




3

The process of Roof rack installation manual of the SUV-Plus V4 canopy before installs on the vehicle.

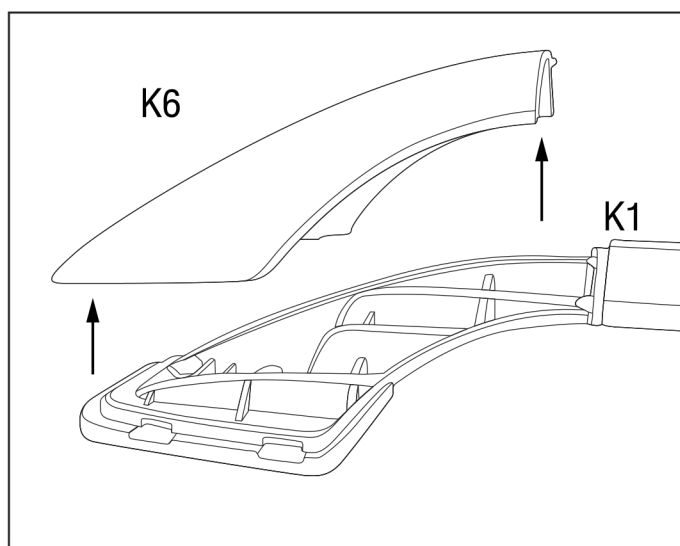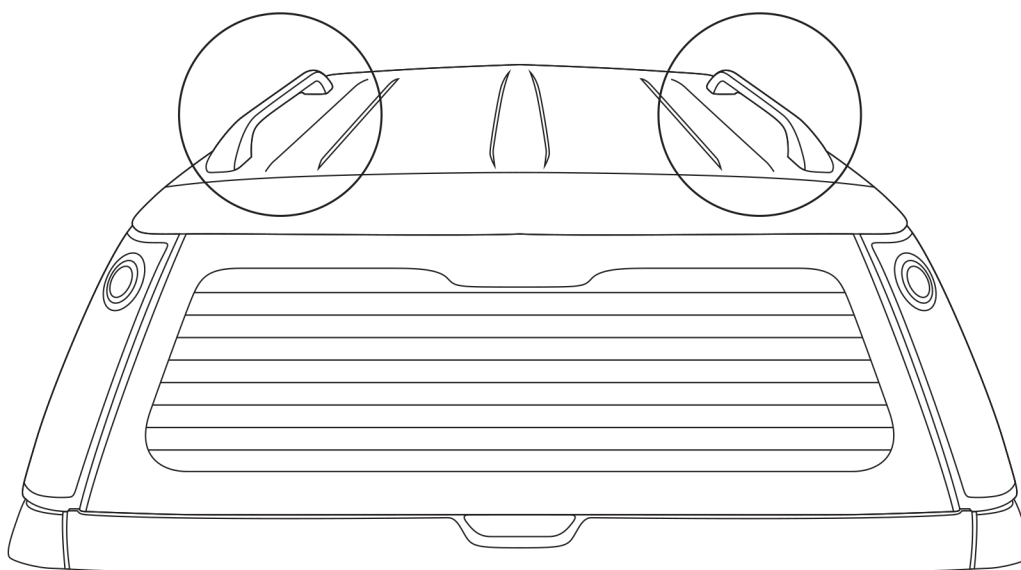


Roof rack Front Part – Rear Left

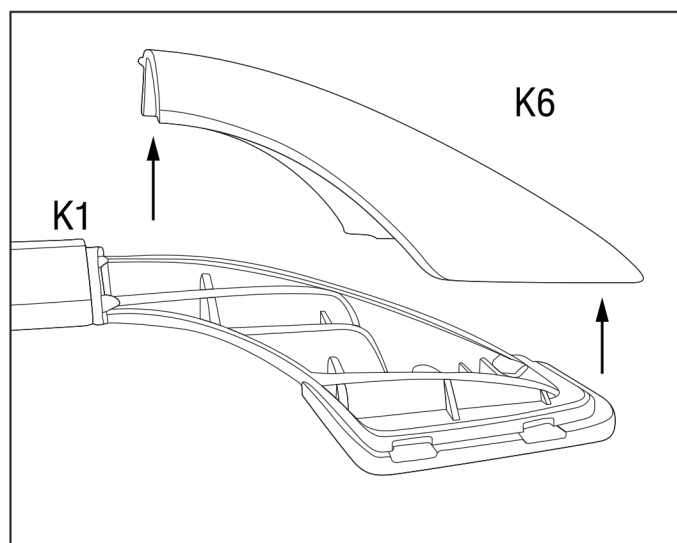


The process of remove the roof rack cover on the SUV-Plus V4 canopy in order to install nuts.



4

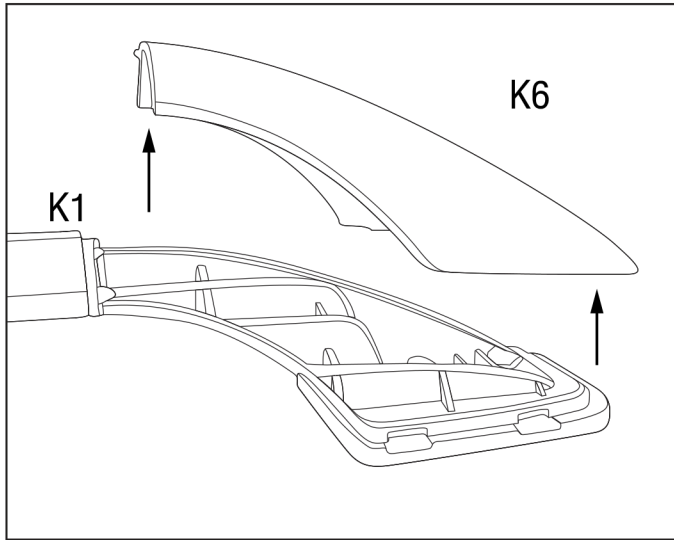


Roof rack Front part – Rear Right.

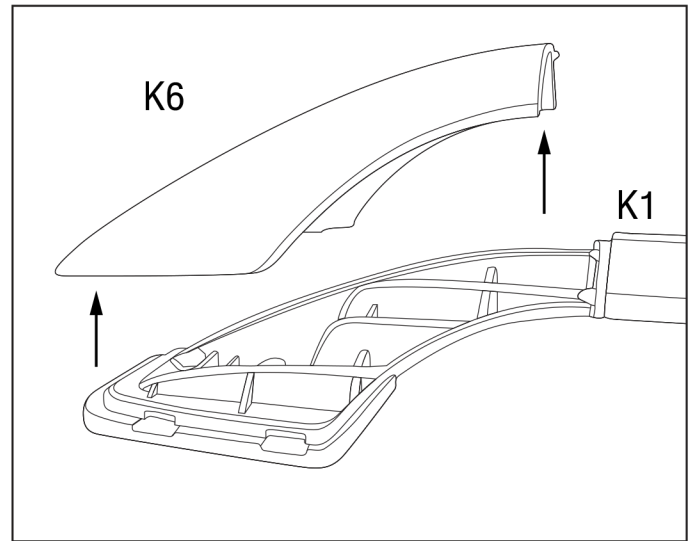




The process of remove the roof rack cover on the SUV-Plus V4 canopy in order to install nuts.



5

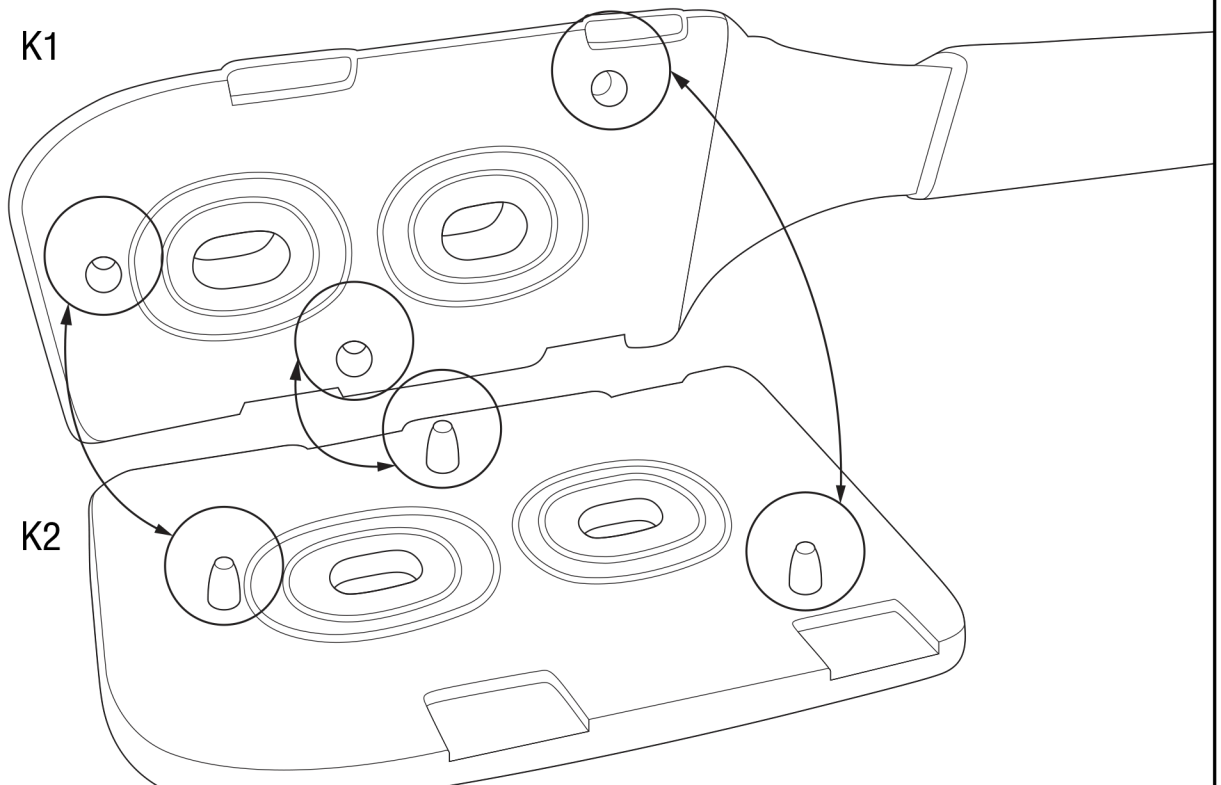

Rubber Pad dispatch position of the Roof rack legs when install on the canopy.

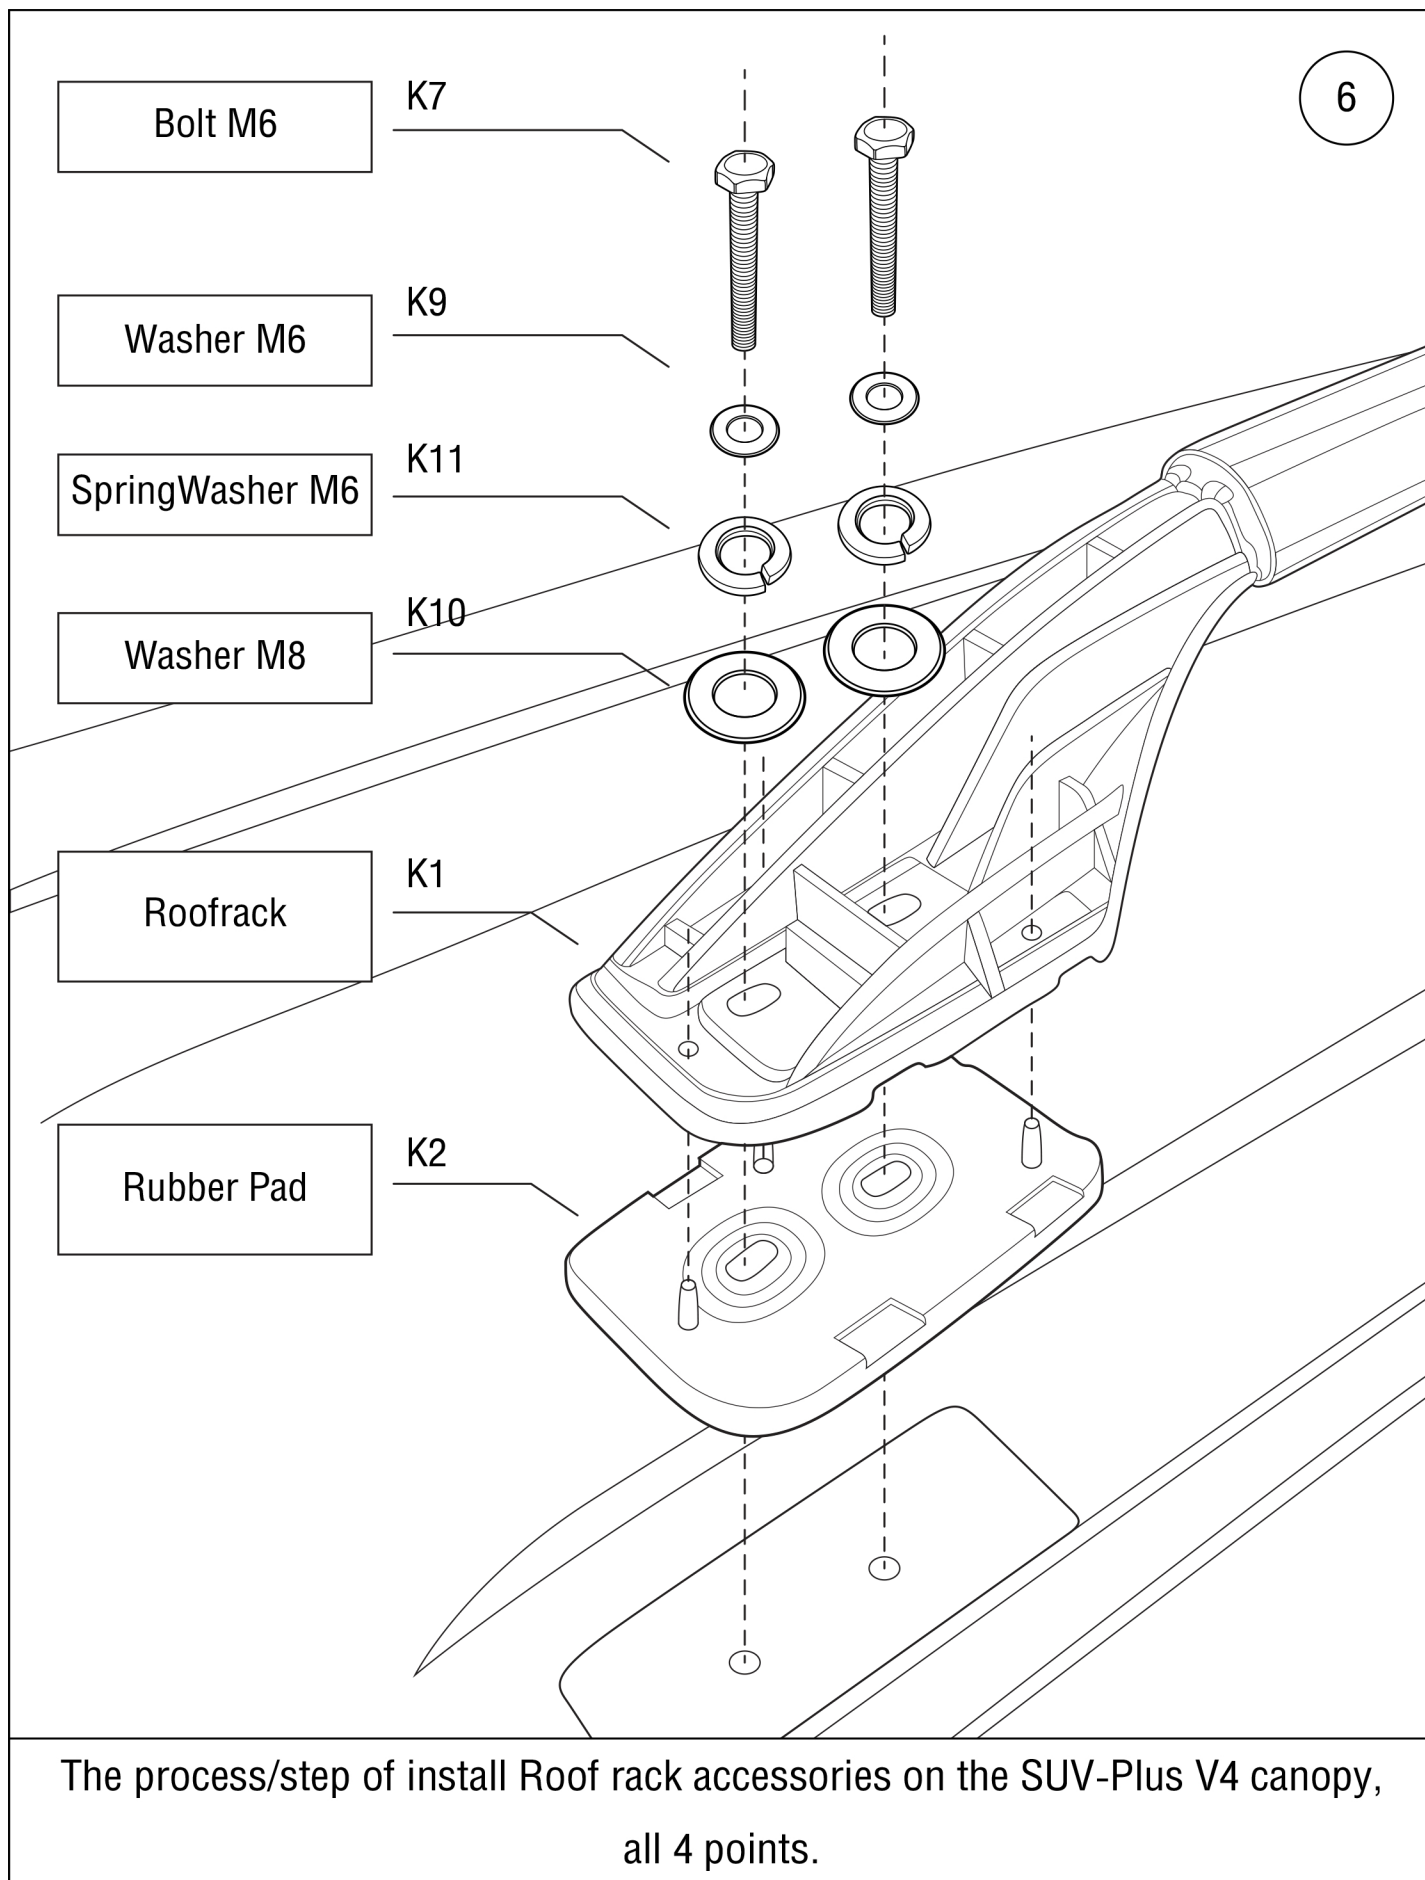

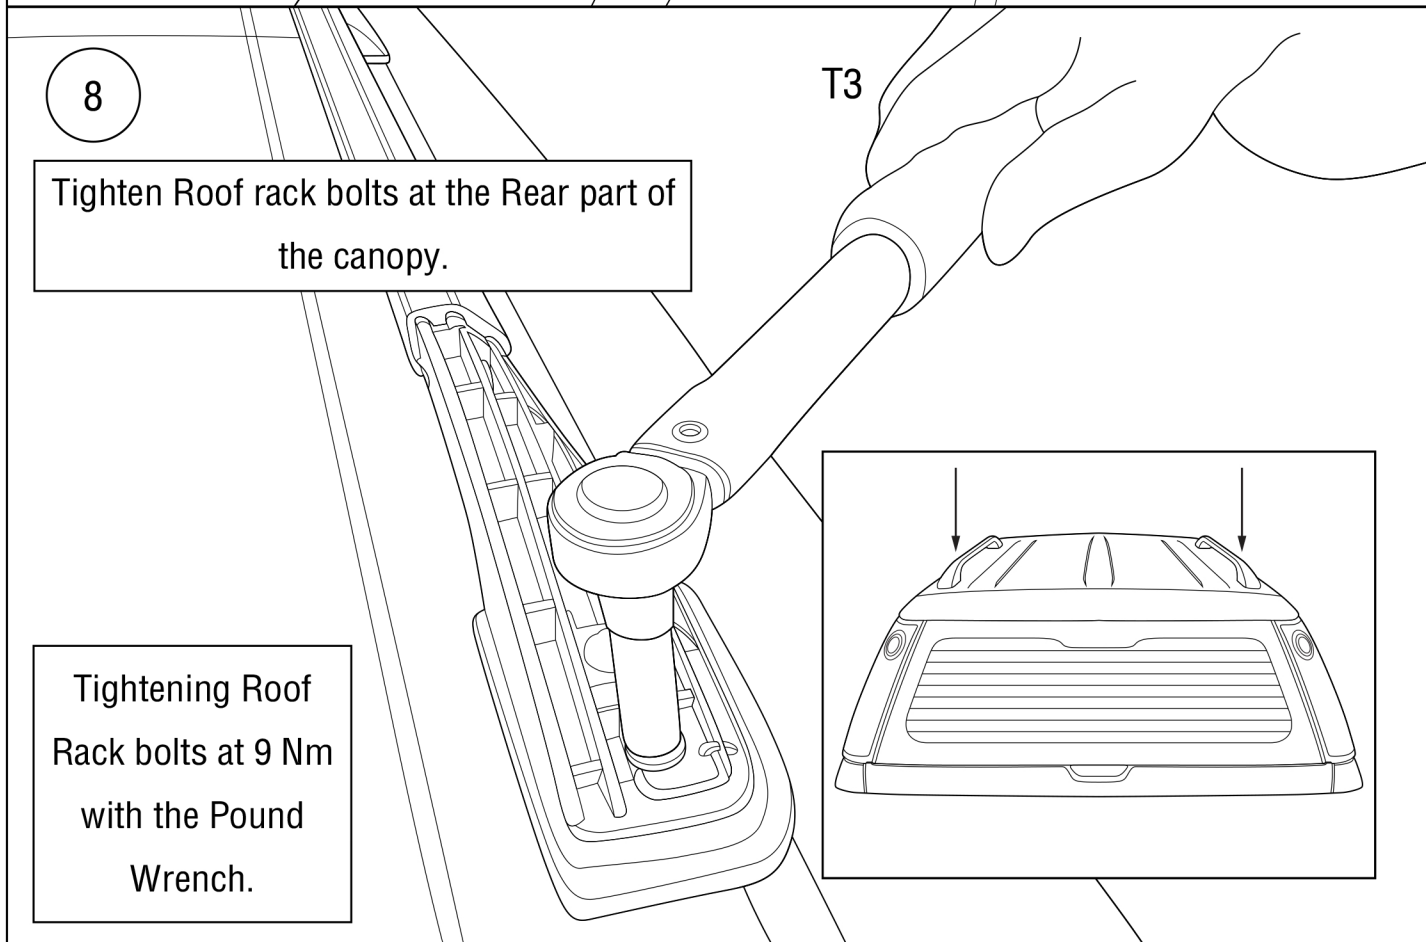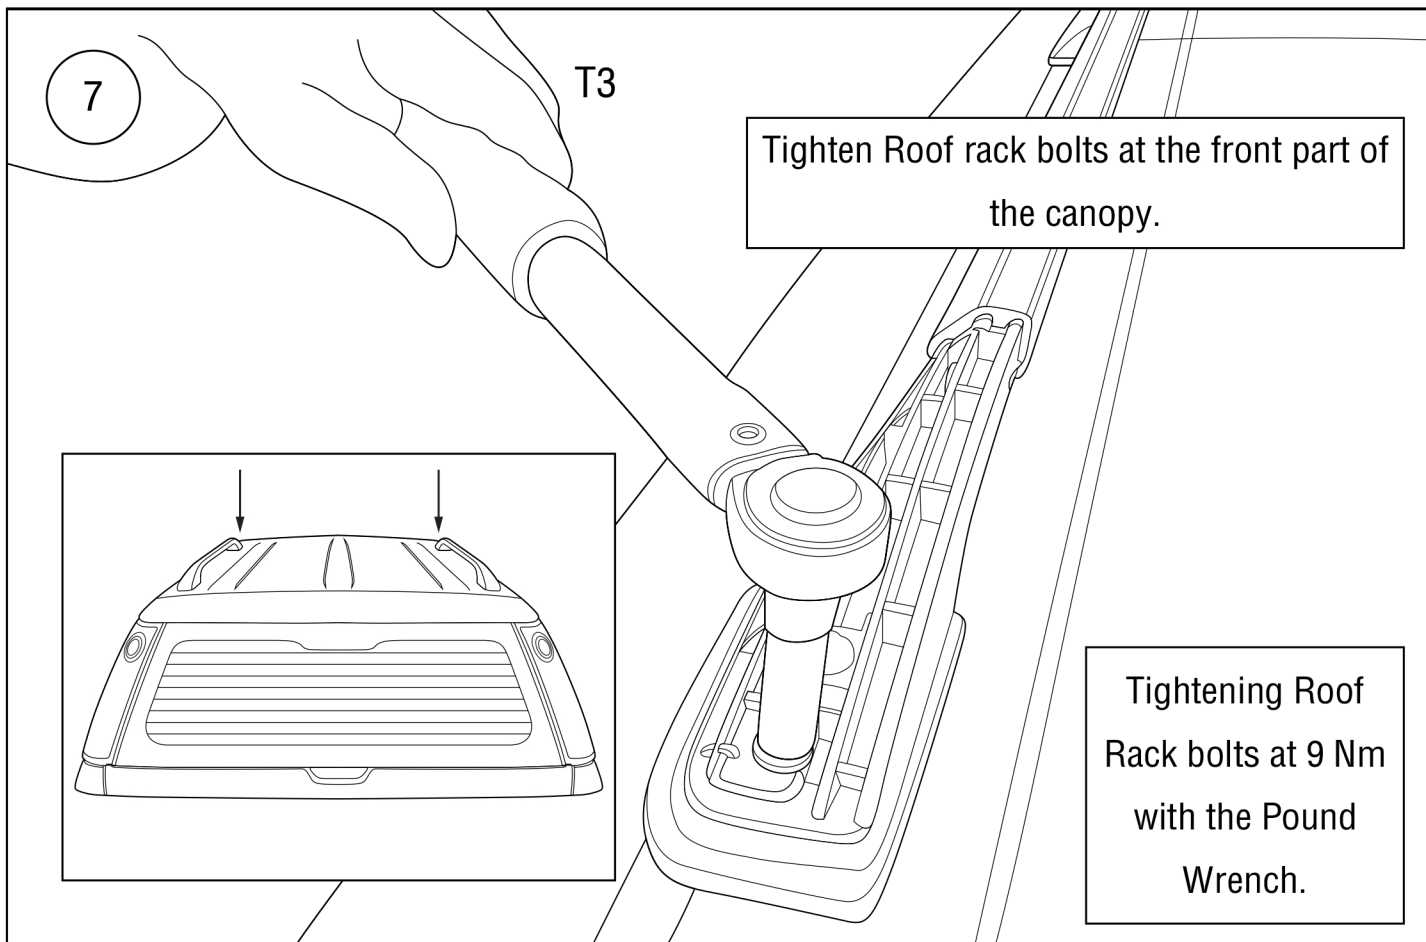

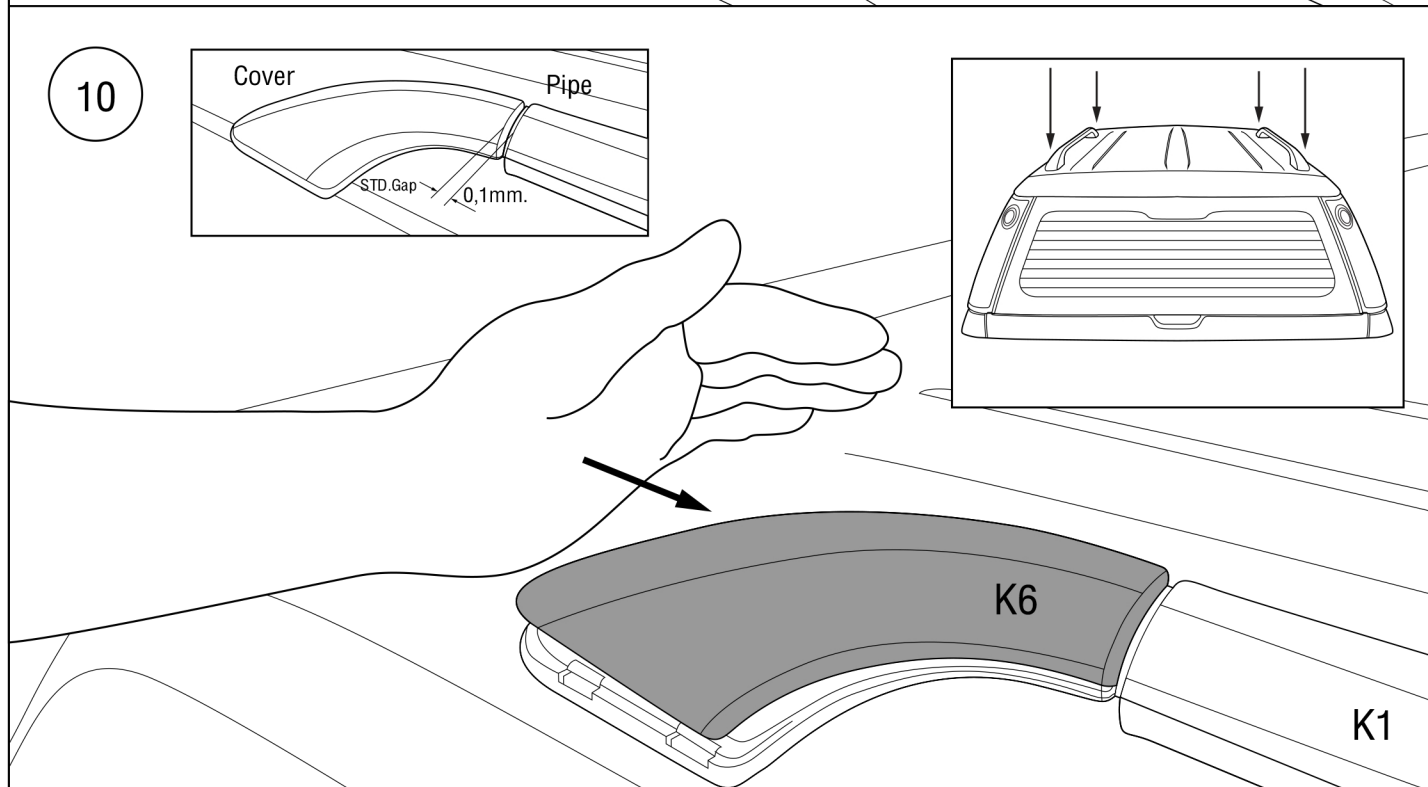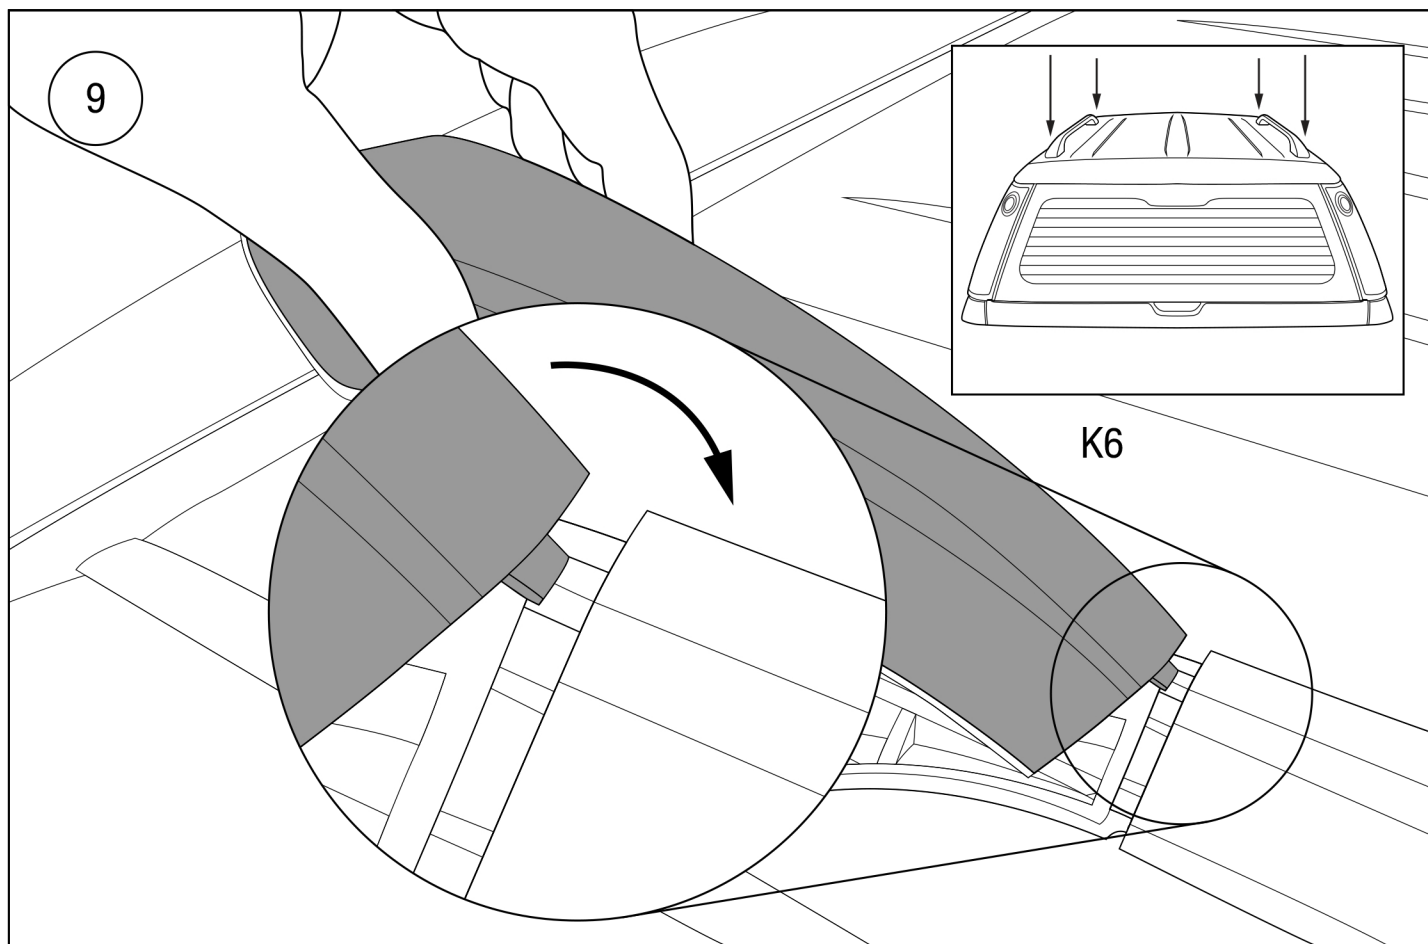


Press and push the Roof rack cover back to the position by hand, then check the gap between cover and roof rack (pipe).

11

The process of checking and preparing the Isuzu D-Max 2020 vehicle before install the canopy.


1. Clean up the vehicle body including the top, all sides and Rear tub.
2. Cover the fabric to protect the scratches resistant.

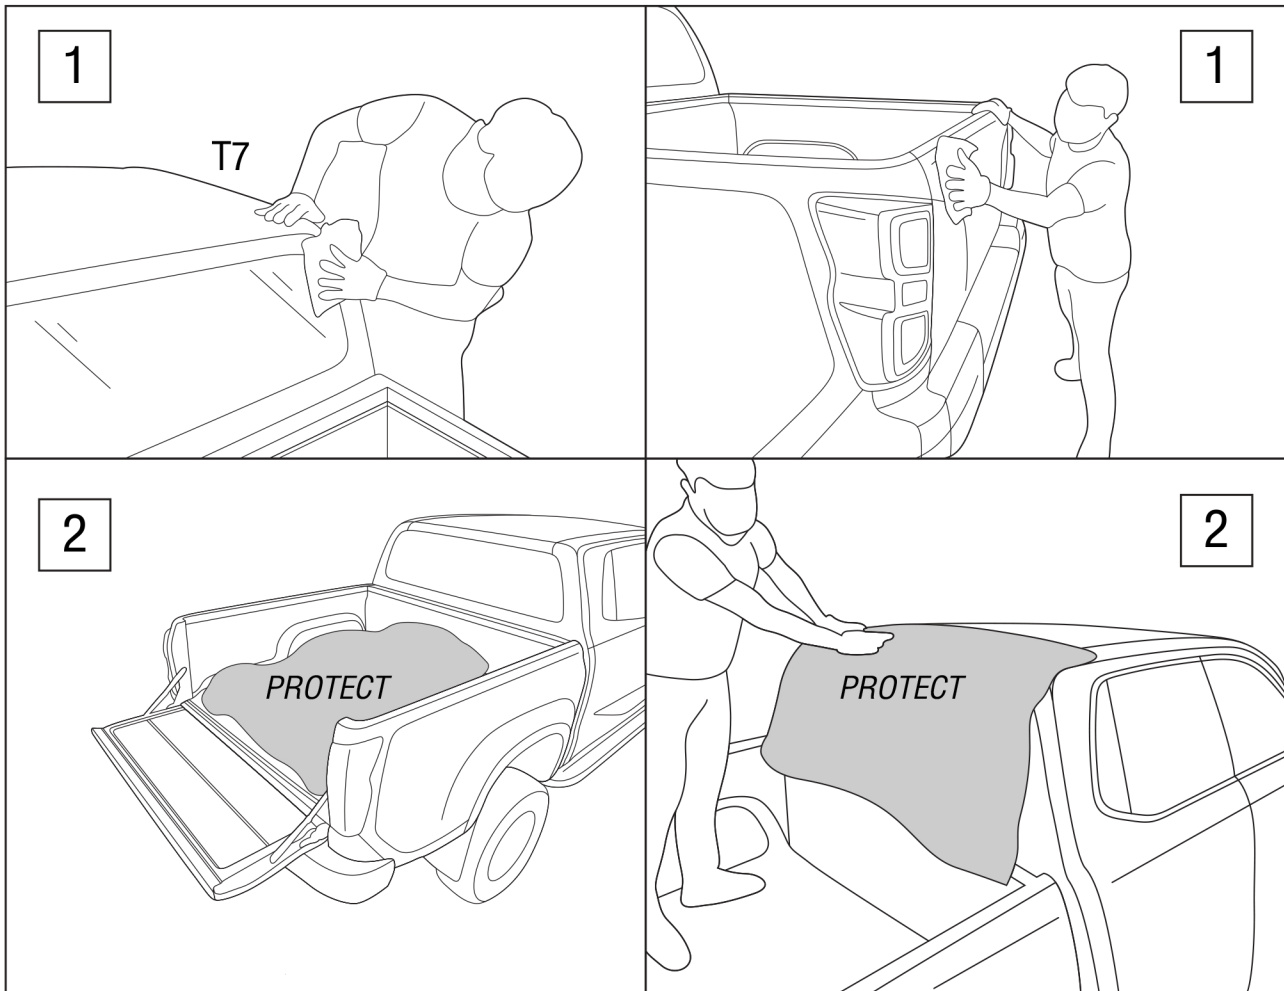




12

The process of preparing Sammitr Canopy SUV-Plus V4 model before install on the vehicle.

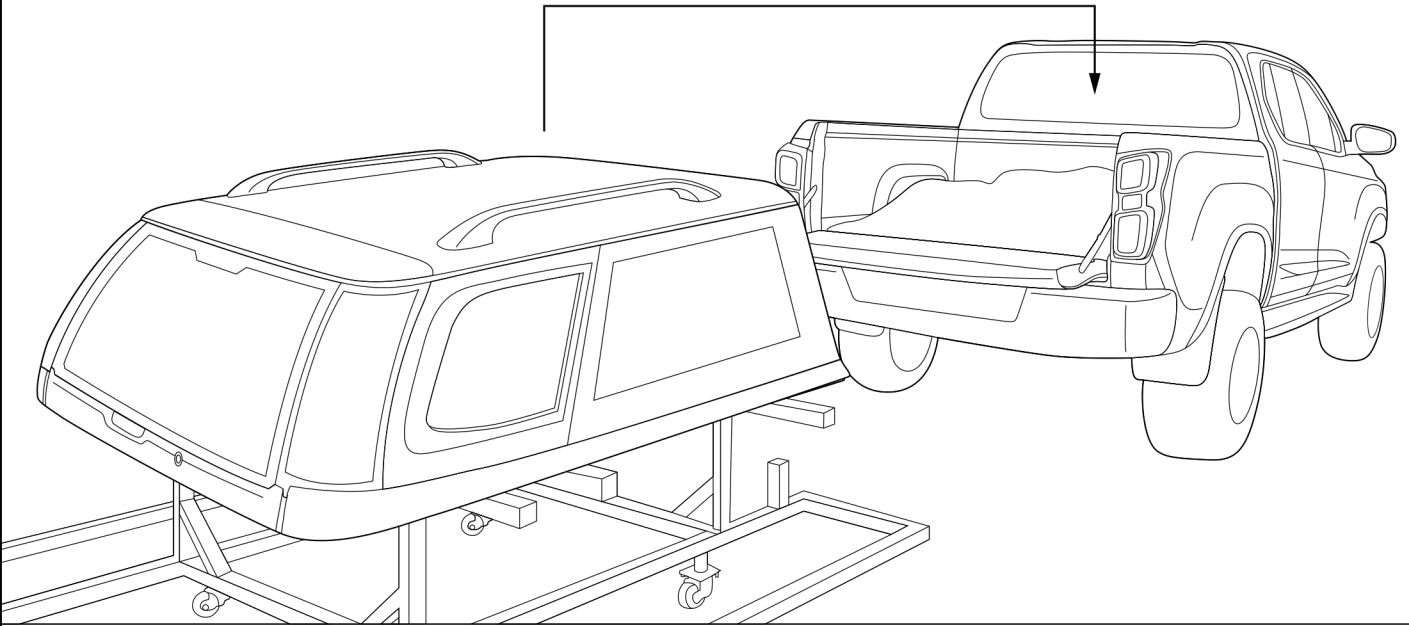


13

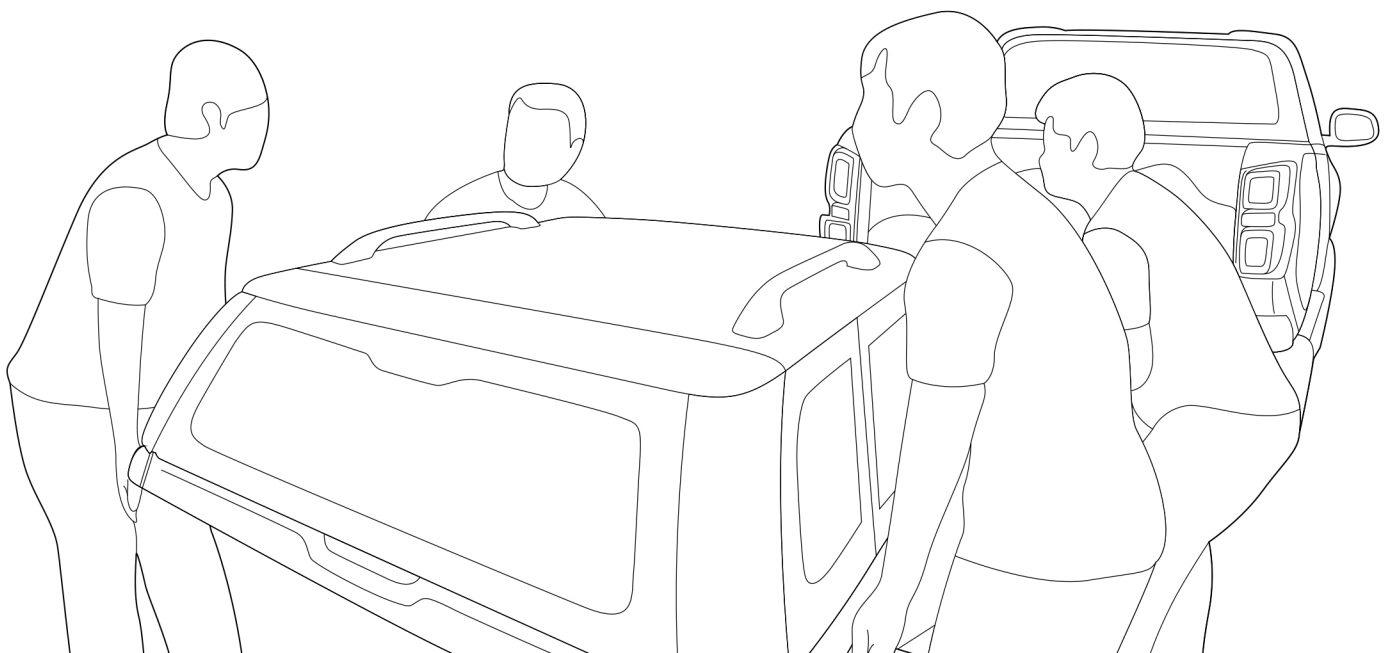

The process of lifting the canopy onto the vehicle tub by using 4 people for lifting.




14

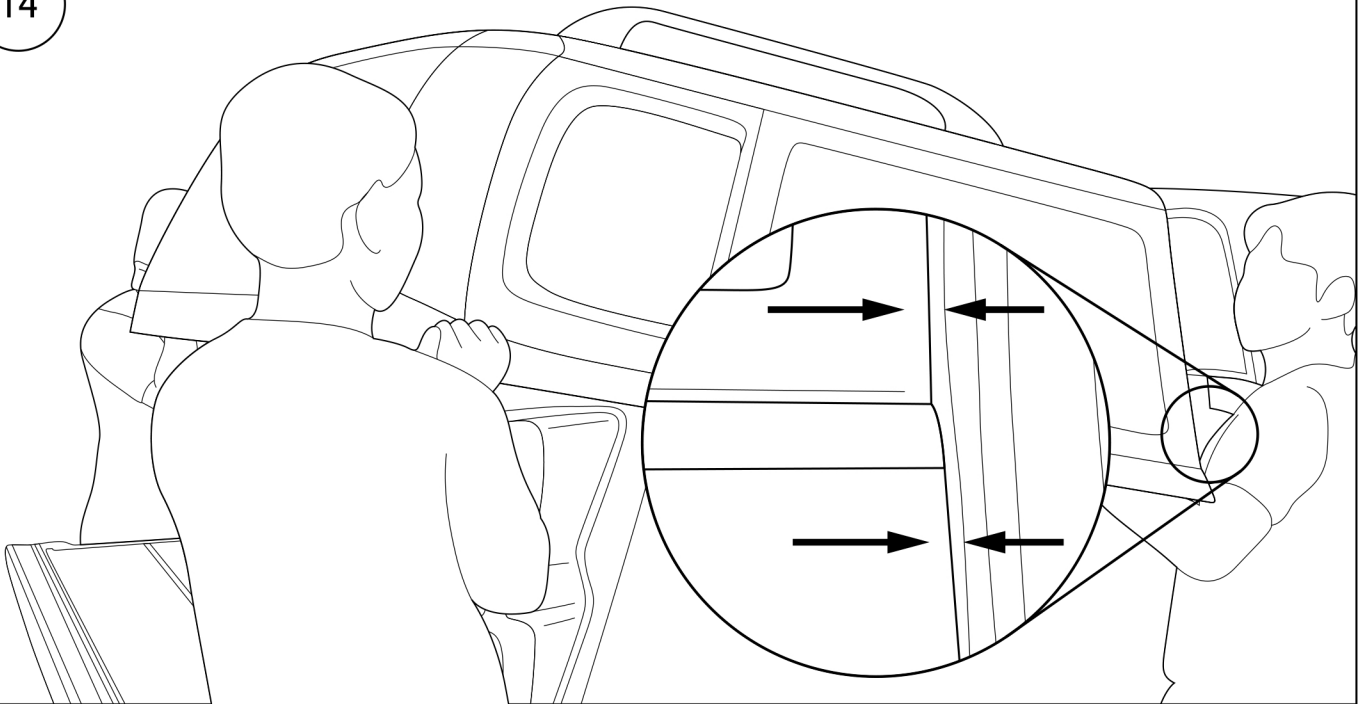


Lift canopy over the pick up truck by rising the rear part higher and the front part to be in the parallel with the edge of the vehicle tub.

15

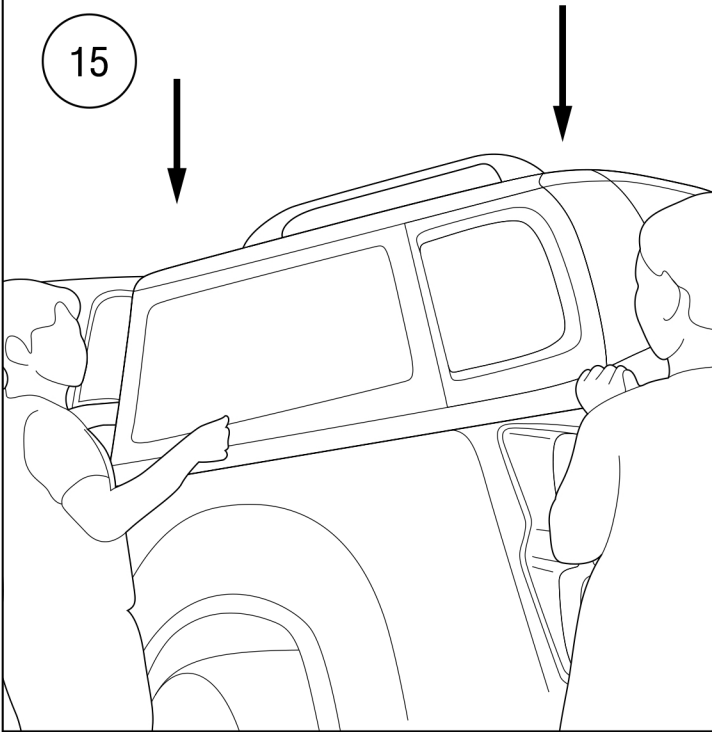


After get the distance in front part and then put the rear part to cover the vehicle tub.


16

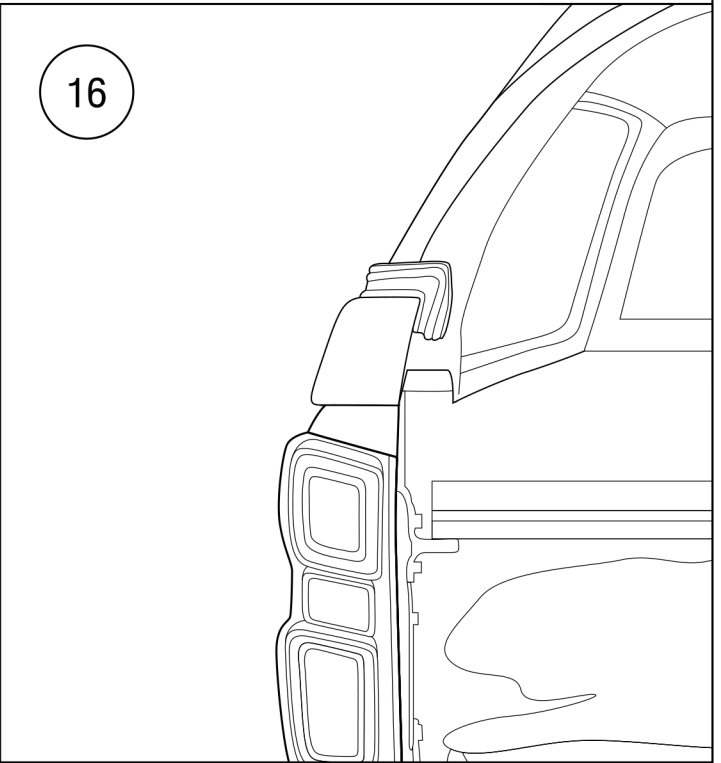

Make sure the distance between canopy edge and vehicle rear tub are equivalent both left and right sides.

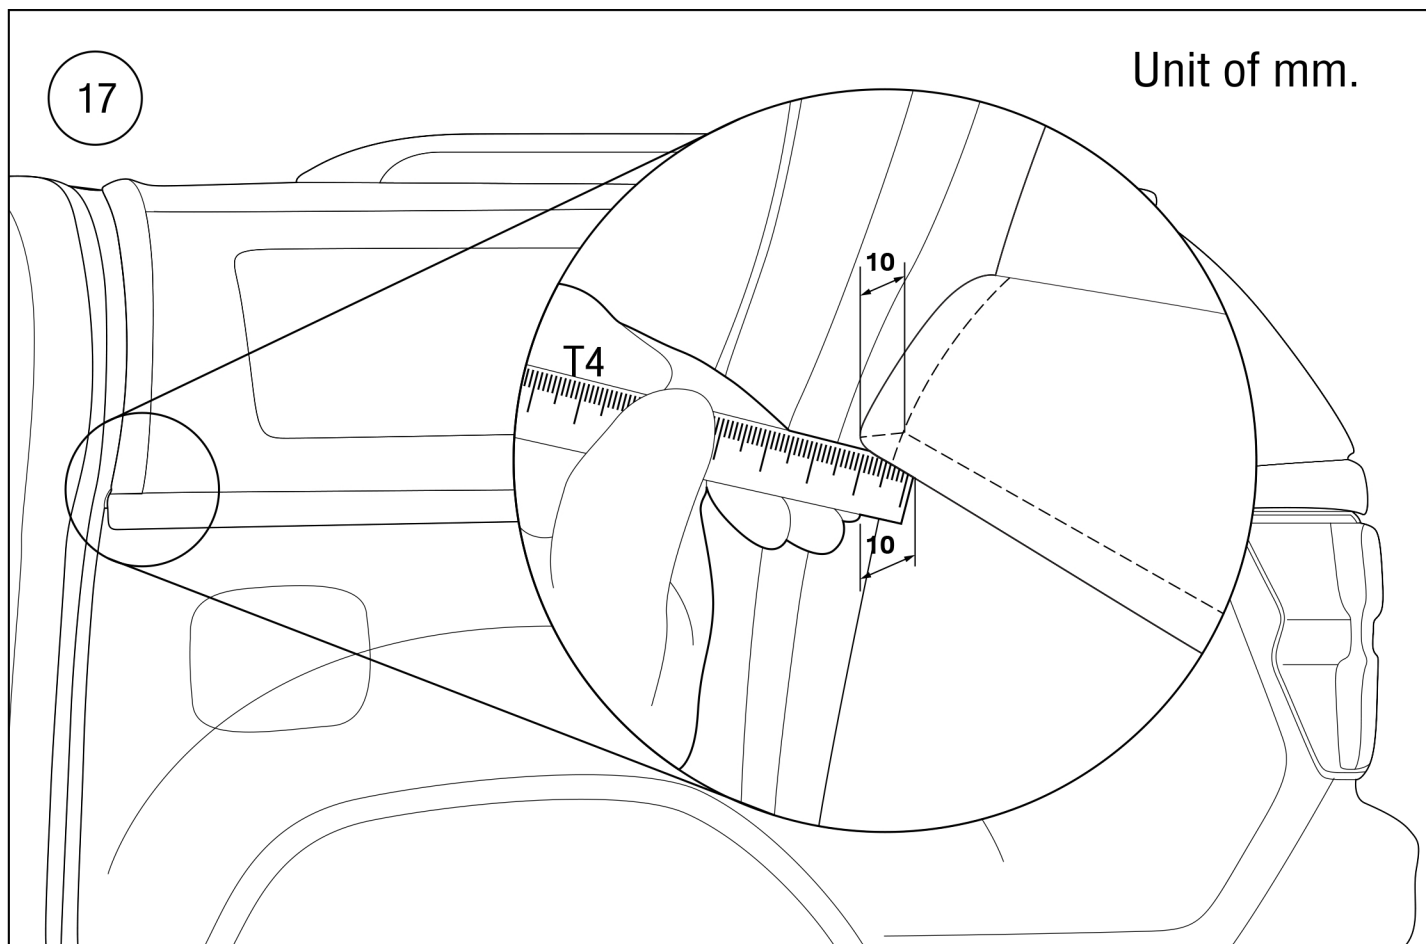

Measure the distance between canopy coverrail and the vehicle, to have the 10-13 mm distance in overall.

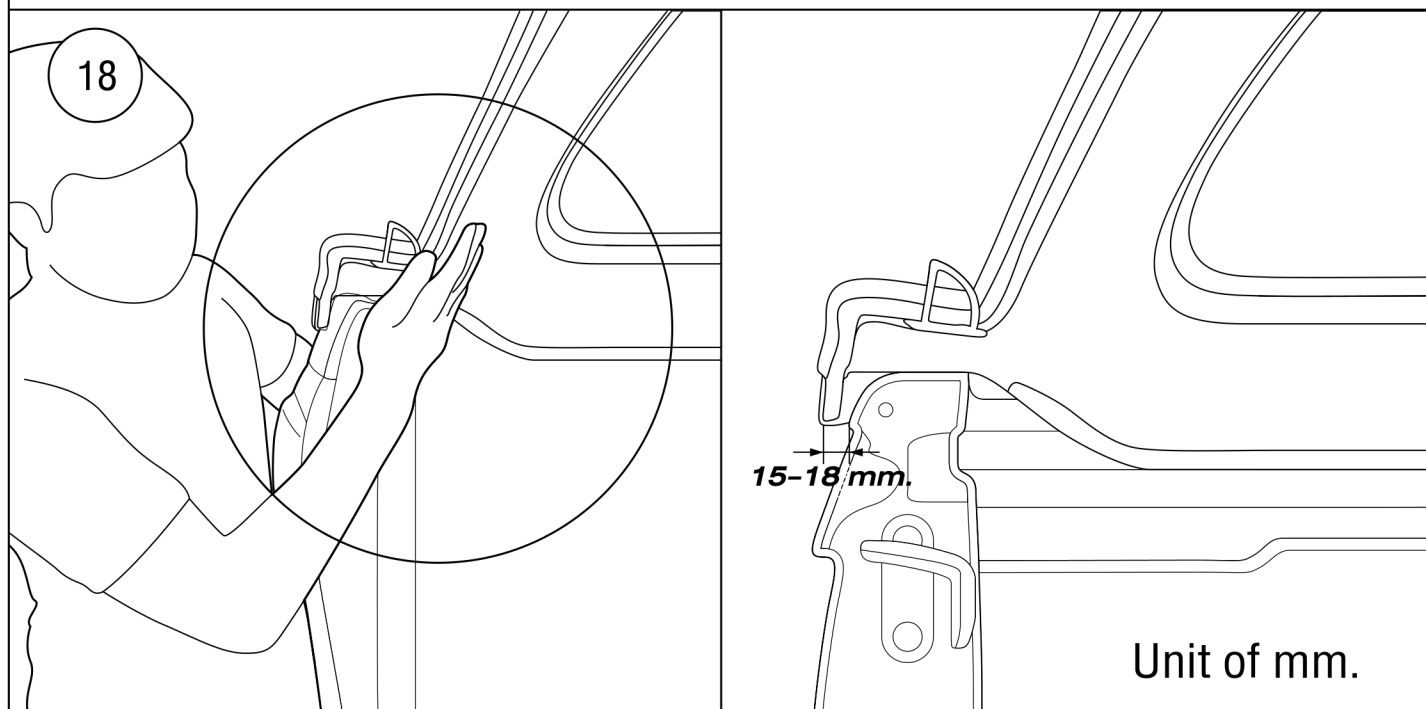


After finished measure the front part, check the distance at rear part of canopy which must have the distance of 15-18 mm.





19


The process of C-Clamp installation SUV-Plus V4 canopy model with the vehicle.

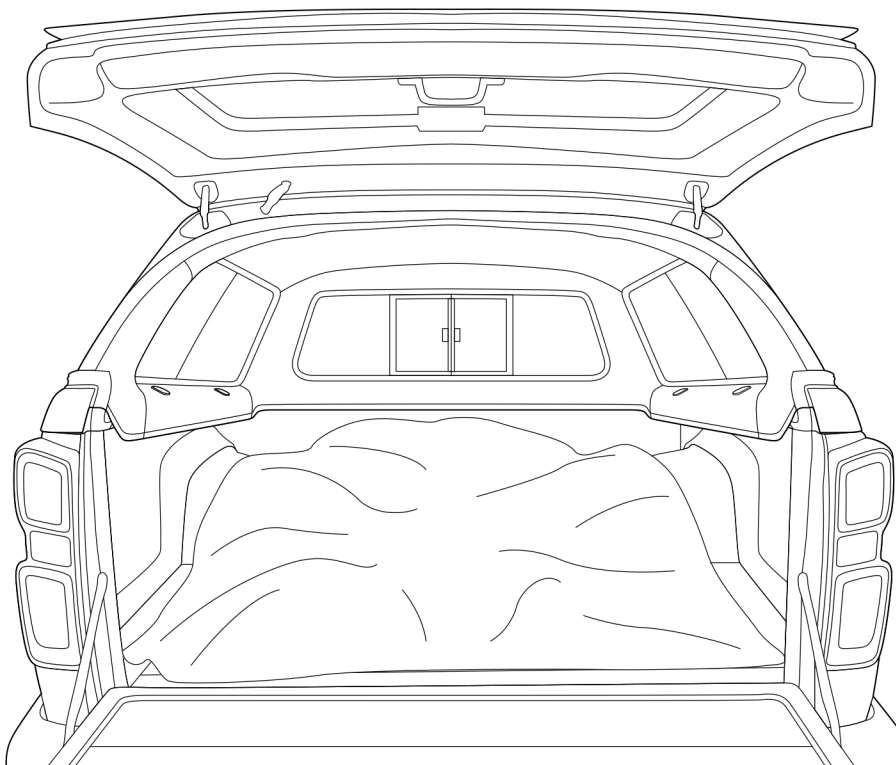

20

Open / take off the rubber plug.

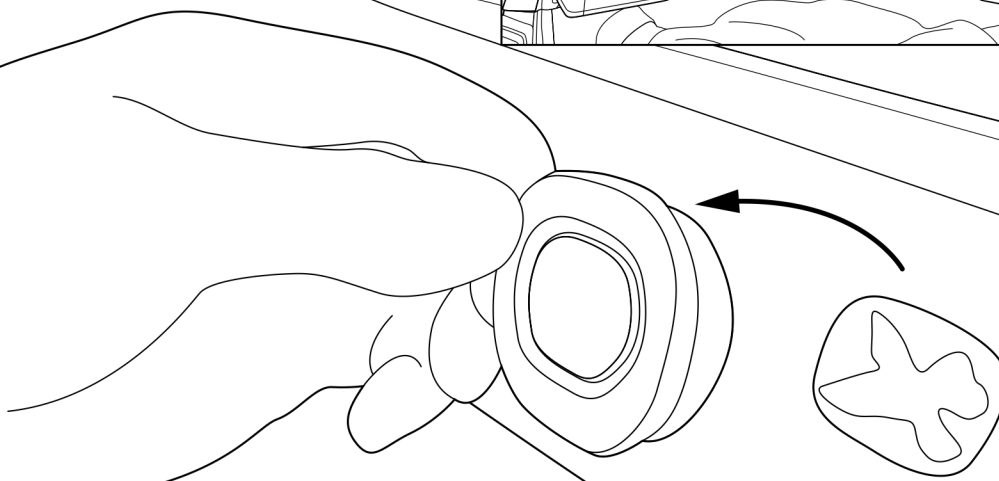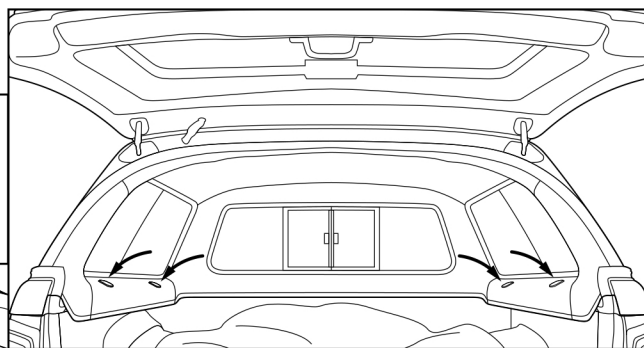


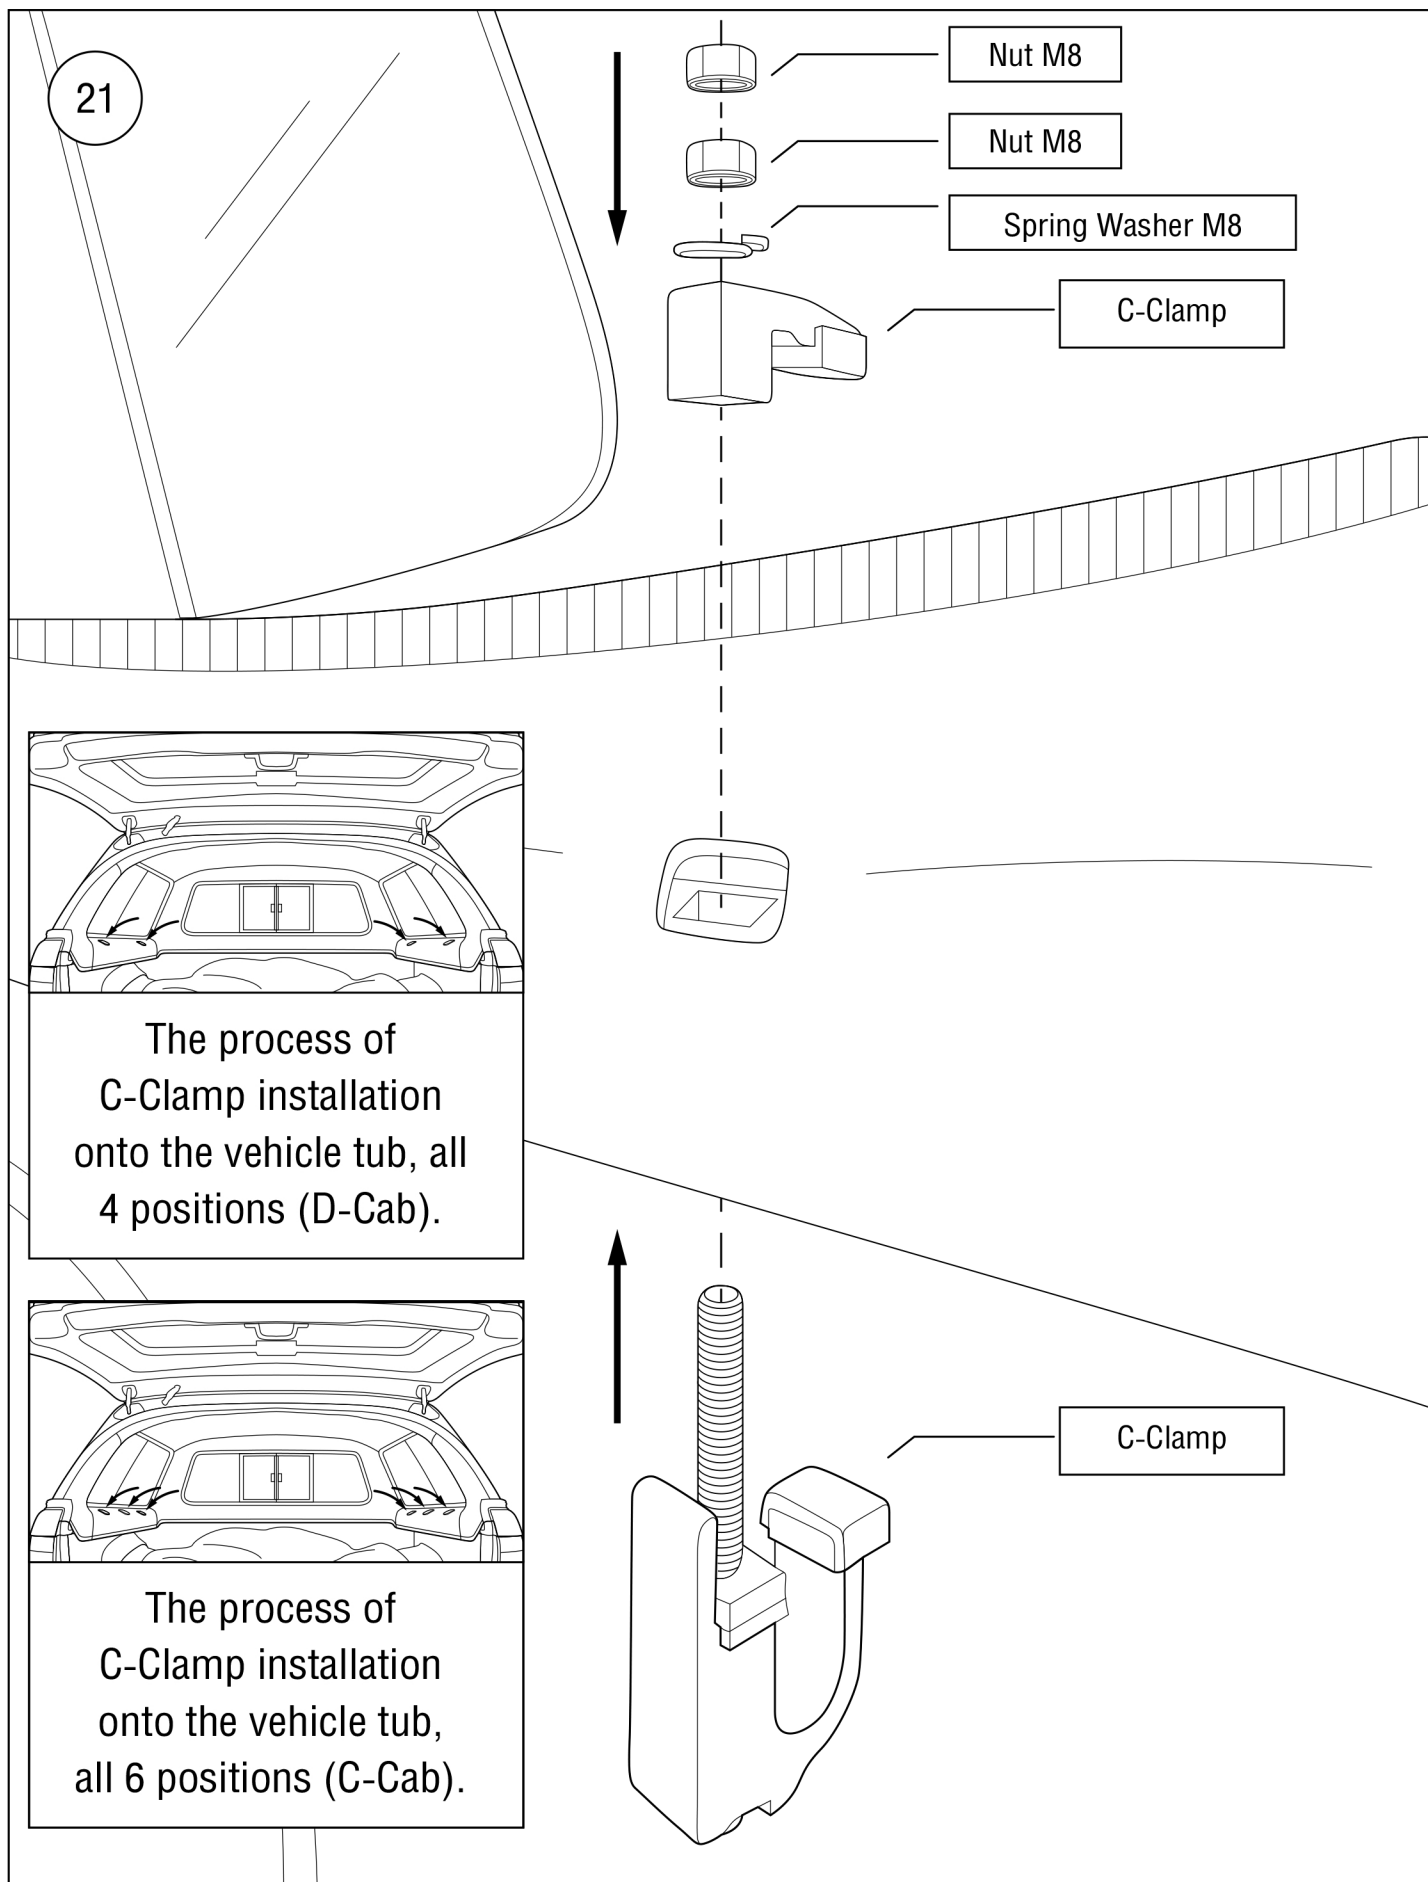



22.1

Tighten bolts of c-clamp by using pound wrench, with the pressure of 16 Nm.

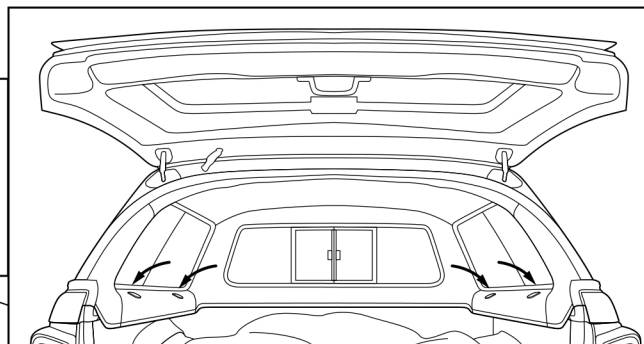


T3

D-Cab

Tighten canopy C-Clamp bolts with vehicle all 4 positons.

22.2

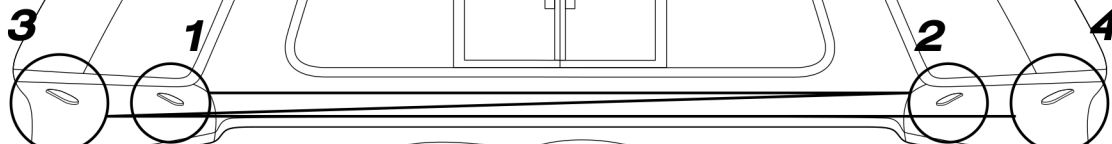

Caution : Before tighten bolts position 3 and 4 please make sure that the distance between the rear left and right pole of the canopy is equal.

D-Cab

Steps of canopy C-Clamp bolts tightening onto vehicle.



23.1

K5

D-Cab

C-Clamp mounting positions
onto vehicle (Left).

23.2

K5


D-Cab

C-Clamp mounting positions
onto vehicle (Right).



24.1

Tighten bolts of c-clamp by using pound wrench, with the pressure of 16 Nm.

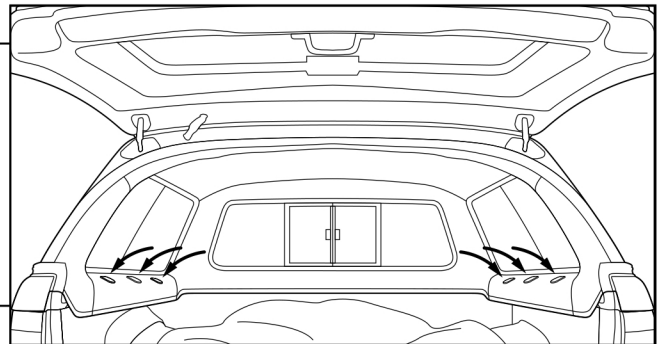


T3

C-Cab

Tighten canopy C-Clamp bolts with vehicle all 6 positons.

24.2

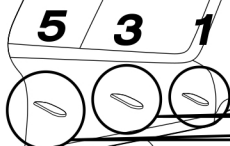

Caution : Before tighten bolts position 5 and 6 please make sure that the distance between the rear left and right pole of the canopy is equal.

C-Cab

Steps of canopy C-Clamp bolts tightening onto vehicle.



25.1

K5

C-Cab


C-Clamp mounting positions
onto vehicle (Left).

25.2


K5

C-Cab

C-Clamp mounting positions
onto vehicle (Right).

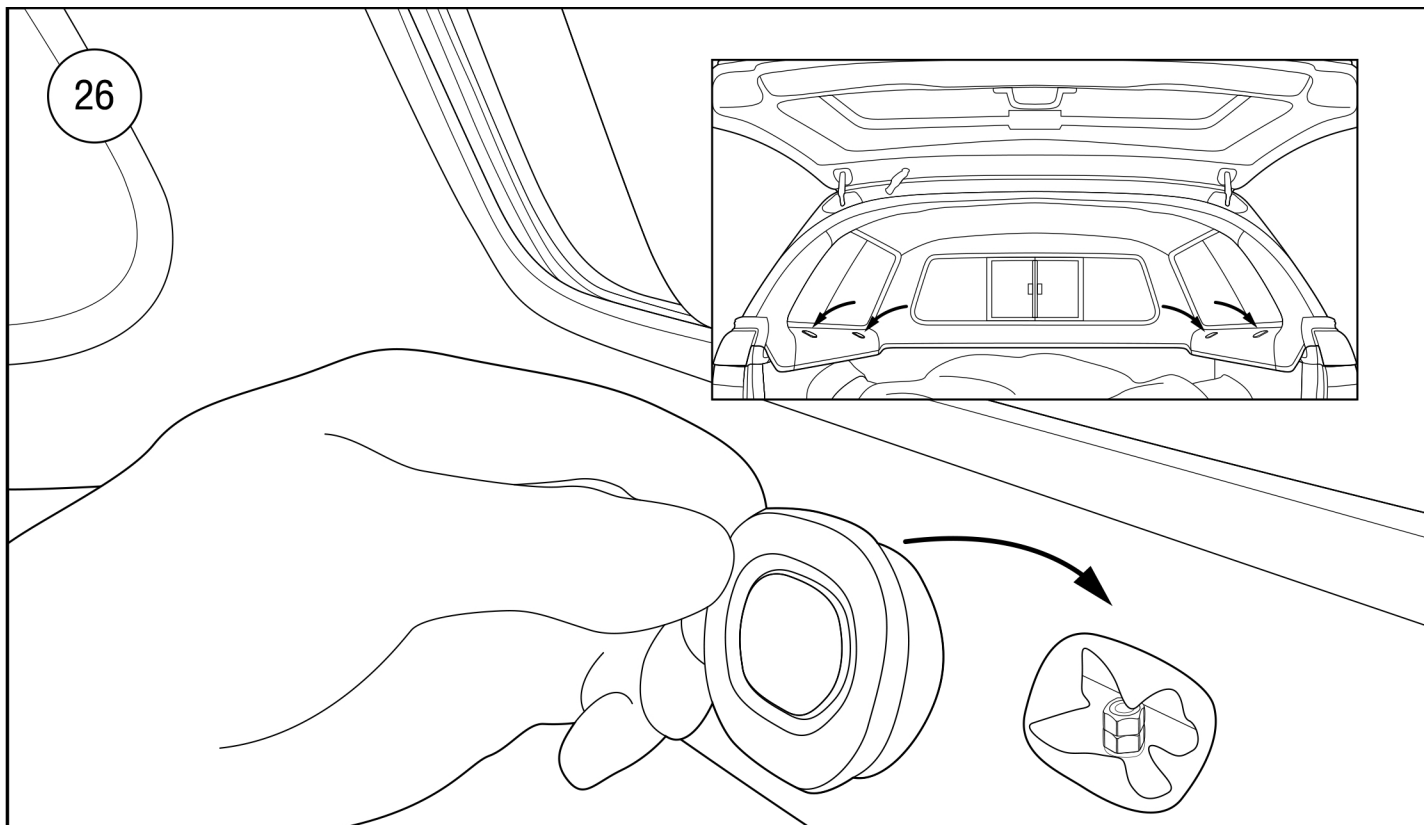

Close the rubber plug.

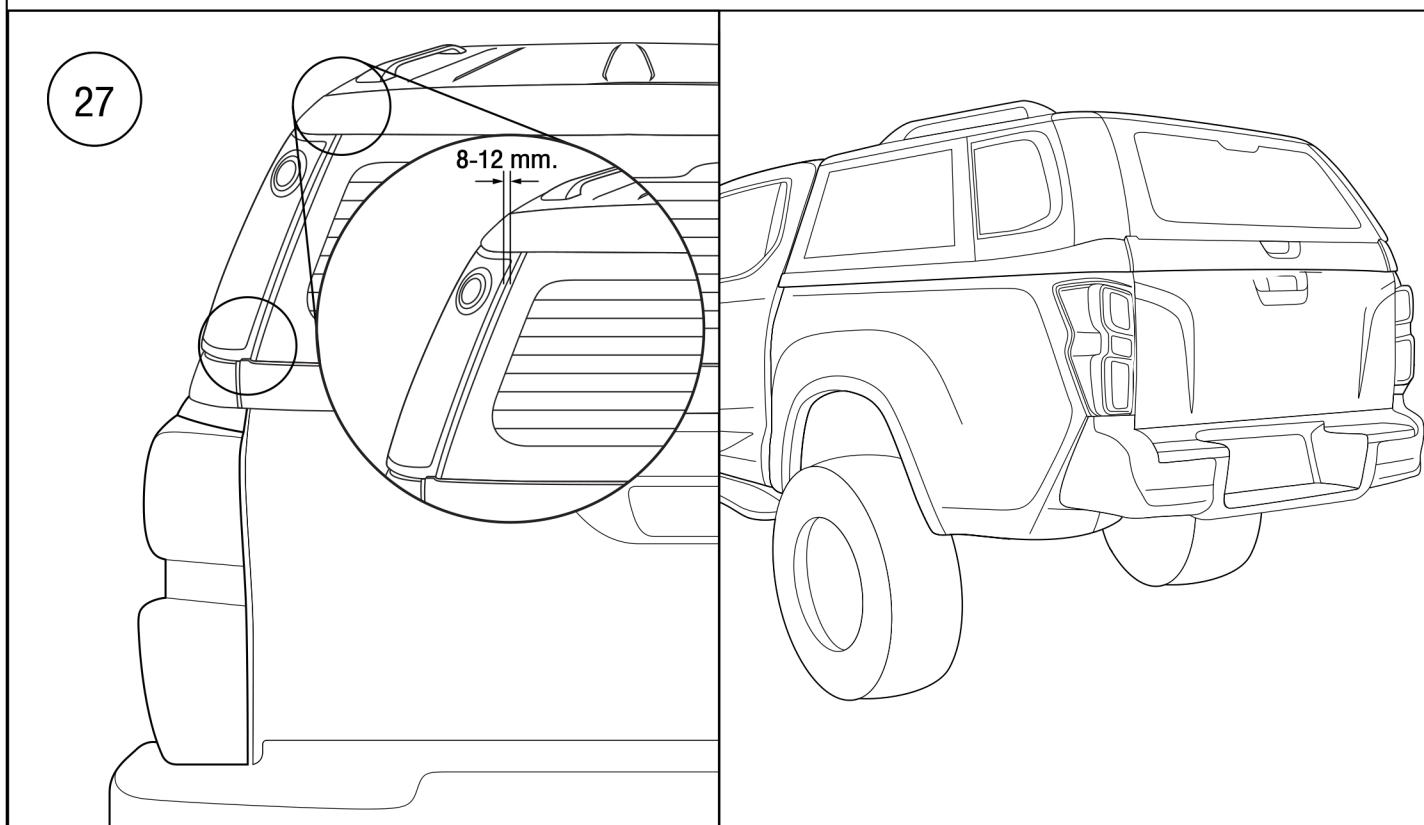

Measure the distance between backdoor and rear pillar, to have the 8-12 mm. in along the line.

The process of canopy installation is completed.